




Model

# 1330

Revision 1 Updated Aug 16, 2012

## Technical Manual & Parts Lists

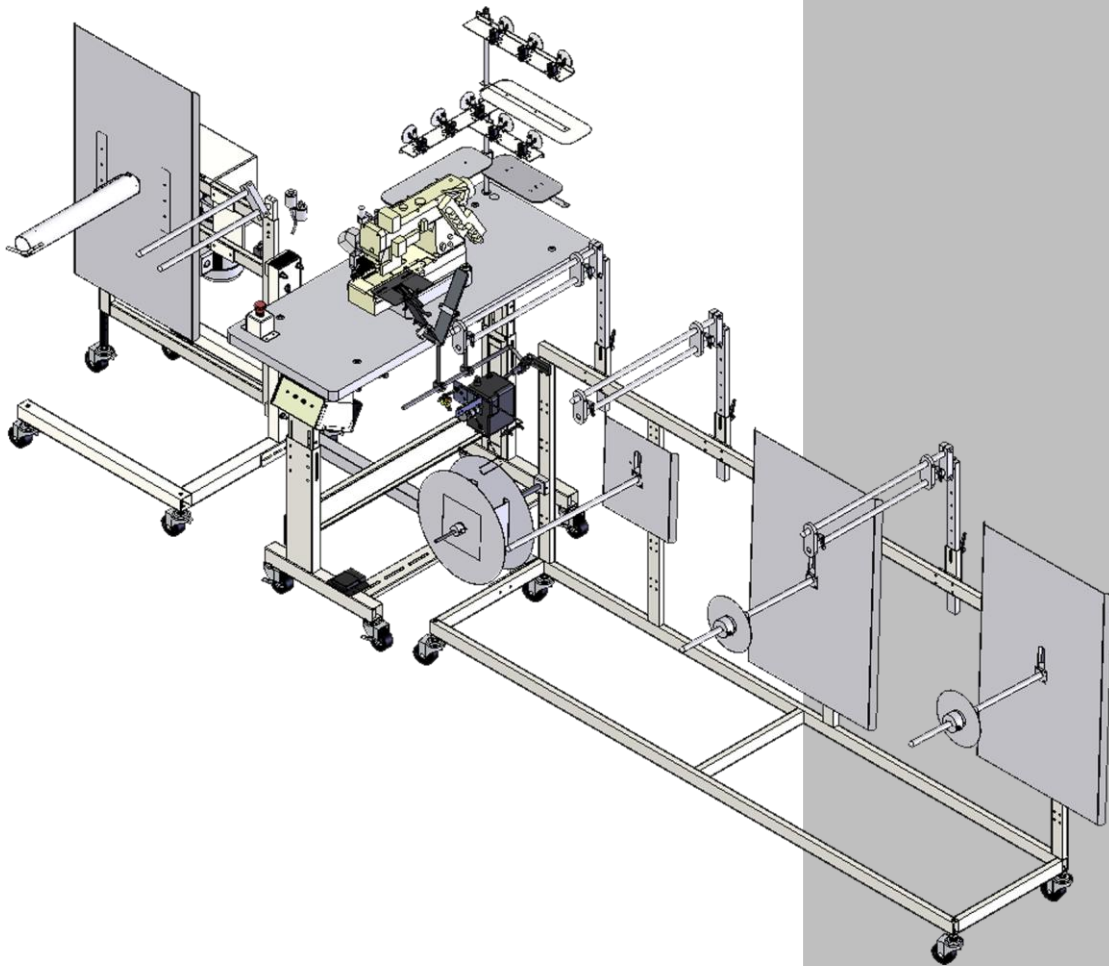

From the library of: Diamond Needle Corp

**Atlanta Attachment Company**

362 Industrial Park Drive

Lawrenceville, GA 30046

770-963-7369 • [www.atlatt.com](http://www.atlatt.com)



# ATLANTA ATTACHMENT COMPANY, INC.

## Confidential and Proprietary Information

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.

All materials contained herein are additionally protected by United States Copyright law and may not be used, disclosed, reproduced, distributed, published or sold without the express written consent of Atlanta Attachment Company, which consent may be withheld in Atlanta Attachment Company's sole discretion. You may not alter or remove any copyright, trademark or other notice from copies of these materials.

## Patents & Patents Pending

The sale of this product does not sell or otherwise transfer any license or other rights under any U.S. Patent or other corresponding foreign patent.

This equipment is manufactured under one or more of the following patents:

4,280,421 • 4,432,294 • 4,466,367 • 4,644,883 • 5,134,947 • 5,159,889 • 5,203,270 • 5,373,798 • 5,437,238 • 5,522,332 • 5,524,563 • 5,562,060 • 5,634,418 • 5,647,293 • 5,657,711 • 5,743,202 • 5,865,135 • 5,899,159 • 5,915,319 • 5,918,560 • 5,924,376 • 5,979,345 • 6,035,794 • 6,055,921 • 6,202,579 • 6,279,869 • 6,295,481 • 6,494,225 • 6,523,488 • 6,574,815 • 6,802,271 • 6,834,603 • 6,968,794 • 6,994,043 • 7,543,364 • 7,574,788 • 7,647,876 • 7,735,439

Foreign Patents: 9-520,472 • 0,537,323 • 92,905,522.6 • 96,936,922.2 • 2,076,379 • 2,084,055  
Other U.S. and Foreign Patents Pending.

## IMPORTANT

**It is important to read and understand the information contained within this manual before attempting to operate the machine. Atlanta Attachment Co., Inc. shall not be held liable for damage resulting from misuse of the information presented within, and reserves the right to change the information contained within, without prior notification.**

## Contents

Important Safety Instruction .....	1
Liability .....	2
Safety Equipment on the Machines .....	3
Protective Eyewear .....	4
Important Notices.....	5
Maintenance .....	7
Repair .....	8
A Word to the End User.....	9
Safety Precautions.....	9
Assembly Drawings & Parts Lists .....	11
11330 Border Zipper Workstation .....	13
1330020 Roll Holder.....	15
1330006 Unwinder Motor Assembly.....	17
1335497 Idler Fluted Roller.....	18
1335498 Fluted Drive Roller .....	19
1330027 Junction Box Assembly .....	21
1330220 Folder Assembly/ ¼ “cap.....	22
33008708 Ball Bearing Disc Assembly .....	23
1347094 Tension Assembly.....	25
1330100 Table, Stand, Motor .....	27
1334-1000B Sewing Head Detail .....	29
1330200 Rewinder W/Mounting Assembly .....	31
1347098 Rewind Assembly w/Sleeve .....	33
1330-PD Pneumatic Diagram .....	34
1347MA-PD Pneumatic Diagram, 1347MA .....	35
1330-WD Wiring Diagram .....	36
1347MA-WD Wiring Diagram.....	37

## Important Safety Instruction



This part of the Instruction Material is provided for the safe use of your equipment. It contains important information to help work safely with the unit and describes the dangers inherent in machinery. Some of these dangers are obvious, while others are less evident.

### Mandatory Information

All persons operating and/or working on the 1330 Border Zipper Workstation should read and understand all parts of the Safety Instructions. This applies, in particular, for persons who only operate and/or work on the unit occasionally (e.g. for maintenance and repair). Persons who have difficulty reading must receive particularly thorough instruction.

### Scope of the Instruction Material

- The Instruction Material comprises:
- Safety information
- Operator Instructions
- Electrical and Pneumatic diagrams

And may also include;

- A list of recommended spare parts
- Instruction Manual(s) for components made by other manufacturers
- The layout and installation diagram containing information for installation

### Intended Use

Our machines are designed and built in line with the state of the art and the accepted safety rules. However, all machines may endanger the life and limb of their users and/or third parties and be damaged or cause damage to other property, particularly if they are operated incorrectly or used for purposes other than those specified in the Instruction Manual.

### Exclusion of Misuse



Non-conforming uses include, for example, using the equipment for something other than it was designed for, as well as operation without duly installed safety equipment. The risk rests exclusively with the end user.

Conforming use of the machine includes compliance with the technical data, information and regulations in all parts of the complete Instruction Material, as well as compliance with the maintenance regulations. All local safety and accident prevention regulations must also be observed.

## Liability

The machine should only be operated when in perfect working order, with due regard for safety and the potential dangers, as well as in accordance with the Instruction Material. Faults and malfunctions capable of impairing safety should be remedied immediately. We cannot accept any liability for personal injury or property damage due to operator errors or non-compliance with the safety instructions contained in this booklet. The risk rests exclusively with the end user.

The Instruction Material should always be kept near the machine so that it is accessible to all concerned.

The local, general, statutory and other binding regulations on accident prevention and environmental protection must also be observed in addition to the Instruction Material. The operating staff must be instructed accordingly. This obligation also includes the handling of dangerous substances and provision/use of personal protective equipment.

The Instruction Material should be supplemented by instructions, including supervisory and notification duties with due regard for special operational features, such as the organization of work, work sequences, the personnel deployed, etc.

The personnel's awareness of the dangers and compliance with the safety regulations should be checked at irregular intervals.

## Choice and Qualification of Personnel

Ensure that work on the machine is only carried out by reliable persons who have been appropriately trained for such work - either within the company, by our field staff or at our office - and who have not only been duly appointed and authorized, but are also fully familiar with the local regulations. Work on the machine should only be carried out by skilled personnel, under the management and supervision of a duly qualified engineer.

This not only applies when the machine is used for production, but also for special work associated with its operation (start-up and maintenance), especially when it concerns work on the hydraulic or electrical systems, as well as on the software/serial bus system.

## Training

Everyone working on or with the machine should be duly trained and informed with regard to correct use of the safety equipment, the foreseeable dangers which may arise during operation of the machine and the safety precautions to be taken. In addition, the personnel should be instructed to check all safety mechanisms at regular intervals.

## Responsibilities

Clearly define exactly who is responsible for operating, setting-up, servicing and repairing the machine. Define the responsibilities of the machine operator and authorize him to refuse any instructions by third parties if they run contrary to the machine's safety. This applies in particular for the operators of machines linked to other equipment. Persons receiving training of any kind may only work on or with the machine under the constant supervision of an experienced operator. Note the minimum age limits permitted by law.

## A Word to the Operator

The greatest danger inherent in our machines: is that of fingers, hands or loose clothing being drawn into a machine by live, coasting or rotating tools or assemblies or of being cut by sharp tools or burned by hot elements.

### **ALWAYS BE CONSCIOUS OF THESE DANGERS!**

## Safety Equipment on the Machines



All machines are delivered with safety equipment, which shall not be removed or bypassed during operation.

The correct functioning of safety equipment on machines and systems should be checked every day and before every new shift starts, after maintenance and repair work, when starting up for the first time and when restarting (e.g. after prolonged shutdowns).

If safety equipment has to be dismantled for setting-up, maintenance or repair work, such safety equipment shall be replaced and checked immediately upon completing the maintenance or repair work. All protective mechanisms shall be fitted and fully operational whenever the machine is at a standstill or if it has been shut down for a longer period of time.

## Damage

If any changes capable of impairing safety are observed in the machine or its mode of operation, such as malfunctions, faults or changes in the machine or tools, appropriate steps must be taken immediately, the machine switched off and a proper lockout tagout procedure followed. The machine should be examined for obvious damage and defects at least once per shift. Damage found shall be immediately remedied by a duly authorized person before resuming operation of machine.

The machine should only be operated when in perfect working order and when all protective mechanisms and safety equipment, such as detachable protective mechanisms, emergency STOP systems, etc. are in place and operational.

## Faults or Errors

The machine must be switched off and all moving or rotating parts allowed to come to a standstill and secured against accidental restart before starting to remedy any faults or errors.


## Signs on the Machine

Safety and danger signs on the machine should be observed and checked at regular intervals to ensure that they are complete and undamaged. They should be clearly visible and legible at all times.

### Clothing, Jewelry, Protective Equipment

Long loose hair, loose-fitting clothes, gloves and jewelry, including rings, should be avoided in order to avoid injuries due to being caught, drawn in and wound up inside the machine.

## Protective Eyewear

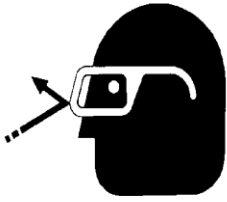

Protective eyewear that has been tested by the local authorities should be worn whenever there is a possibility of loose or flying objects or particles such as when cleaning the machine with compressed air.

## Tools

Always count the number of tools in your possession before starting work on the machine. This will allow you to check that no tools have been left behind inside the machine. Never leave a tool in the machine while working.

## Oils, Lubricants, Chemicals

Note the applicable safety regulations for the product used.

## No Smoking, Fire, Explosion Hazard

Smoking and open flame (e.g. welding work) should be prohibited in the production area due to the risk of fire and explosions.

## Workplace

A clear working area without any obstructions whatsoever is essential for safe operation of the machine. The floor should be level and clean, without any waste.

The workplace should be well lit, either by the general lighting or by local lights.

## Emergency STOP

The emergency STOP buttons bring all machine movements to a standstill. Make sure you know exactly where they are located and how they work. Try them out. Always ensure easy access to the nearest emergency STOP button while working on the machine.

## First Aid

1. Keep calm even when injured.
2. Clear the operator from the danger zone. The decision of what to do and whether to seek additional assistance rests entirely with you, particularly if someone has been trapped.
3. Give First Aid. Special courses are offered by such organizations as the employers' liability insurance association. Your colleagues should be able to rely on you and vice versa.
4. Call an ambulance. Do you know the telephone numbers for the ambulance service, police and fire service?



## Important Notices

### Reporting and Fighting Fires

Read the instructions posted in the factory with regard to reporting fires and the emergency exits. Make sure you know exactly where the fire extinguishers and sprinkler systems are located and how they are operated. Pass on the corresponding information to the firemen when they arrive. Ensure there are enough signs to avoid fire hazards.


The following fire extinguishers may be used:

- Dry powder extinguishers, ABC fire-extinguishing powder.
- Carbon dioxide fire extinguishers to DIN 14461 for electronic components. Great care must be exercised when using carbon dioxide fire extinguishers in confined, badly ventilated rooms (see DIN 14406 and 14270).

Isolate the machine from the power supply if a fire breaks out. Do not use water on burning electrical parts until it is absolutely certain that they have been completely disconnected from the power supply. Burning oils, lubricants, plastics and coatings on the machine can give off gases and vapors that may be harmful to your health.

A qualified person should be consulted to repair the damage after a fire.

### Electrical Power Supply

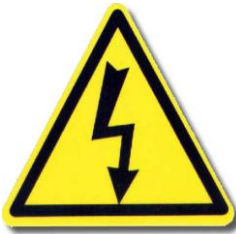

Before undertaking any maintenance or repair work on the machine, switch off the electrical power to the machine at the main source and secure it with a padlock so that it cannot be switched on again without authorization.

In practice, this may mean that the technician, electrician and operator all attach their own padlock to the master switch simultaneously so that they can carry out their work safely. Locking extension plates should be available for multiple locks if required. The primary purpose for a lockout/tagout procedure is to protect workers from injury caused by unexpected energizing or start-up of equipment.

Energy sources (electrical/pneumatic/hydraulic, etc.) for the equipment shall be turned off or disconnected and the switches locked or labeled with a warning tag. It is the responsibility of the employer to establish control procedures. Follow lockout/tagout procedures before, setup and/or any service or maintenance work is performed, including lubrication, cleaning or clearance of jams.

**Caution: The machine is still not completely de-energized even when the master switch is off.**

- Electricity - The machine is always isolated from the electrical power supply whenever the master switch has been switched off. However, this does not apply for the power supply in the control cabinet, nor for equipment that does not draw its power via the master switch.
- Pneumatic / hydraulic energy - Almost all our machines carry compressed air. In addition to switching off the master switch, the air supply must also be disconnected and the machine checked to ensure it is depressurized before starting any work on the machine; otherwise the machine may execute uncontrolled movements.

- Kinetic energy - Note that some motors or spindles, for example, may continue to run or coast run on after being switched off.
- Potential energy - Individual assemblies may need to be secured if necessary for repair work.

## Delivery of the Machine/Packaging

Note any markings on the packaging, such as weights, lifting points and special information. Avoid temperature fluctuations. Condensation may damage the machine.

## Transport Damage

The packaging and machine must immediately be examined for signs of damage in transit. Such damage must be reported to the shipper/transporter within the applicable time limits. Contact Atlanta Attachment Company and/or your transport insurer immediately, if signs of damage are visible. Never operate a damaged machine.

## Interim Storage

If the machine has to be stored temporarily, it must be oiled or greased and stored in a dry place where it is protected from the weather in order to avoid damage. A corrosion-inhibiting coating should be applied if the machine has to be stored for a longer period of time and additional precautions taken to avoid corrosion.

## Transporting the Machine

Disconnect the machine from all external connections and secure any loose assemblies or parts. Never step under a suspended load. When transporting the machine or assemblies in a crate, ensure that the ropes or arms of a forklift truck are positioned as close to the edge of the crate as possible. The center of gravity is not necessarily in the middle of the crate. Note the accident prevention regulations, safety instructions and local regulations governing transport of the machine and its assemblies.

Only use suitable transport vehicles, hoisting gear and load suspension devices that are in perfect working order and of adequate carrying capacity. Transport should only be entrusted to duly qualified personnel.

Never allow the straps to rest against the machine enclosure and never push or pull sensitive parts of the machine. Ensure that the load is always properly secured. Before or immediately after loading the machine, secure it properly and affix corresponding warnings.

All transport guards and lifting devices must be removed before the machine is started up again. Any parts that are to be removed for transport must be carefully refitted and secured before the machine is started up again.

## Workplace Environment

Our machines are designed for use in enclosed rooms: Permissible ambient temperature approx. 5 - 40 °C (40 - 104 °F). Malfunctions of the control systems and uncontrolled machine movements may occur at temperatures outside this range.

Protect against climatic influences, such as electrostatic charges, lightning strikes, hail, storm damage, high humidity, salinity of the air in coastal regions.

Protect against influences from the surroundings: no structure-borne vibrations, no grinding dust, or chemical vapors.

Protect against unauthorized access.

Ensure that the machine and accessories are set up in a stable position.

Ensure easy access for operation and maintenance (Instruction Manual and layout diagram); also verify that the floor is strong enough to carry the weight of the machine.

## Local Regulations

Particular attention must be paid to local and statutory regulations, etc. when installing machines and the plant (e.g. with regard to the specified escape routes). Note the safety zones in relation to adjacent machines.

# Maintenance

## General Safety Instructions

The machine shall be switched off, come to a standstill and be secured so that it cannot be switched on again inadvertently before starting any maintenance work whatsoever. Use proper lockout/tagout procedures to secure the machine against inadvertent startup.

Remove any oil, grease, dirt and waste from the machine, particularly from the connections and screws, when starting the maintenance and/or repair work. Do not use any corrosive-cleaning agents. Use lint-free rags.

Retighten all screw connections that have to be loosened for the maintenance and repair work. Any safety mechanisms that have to be dismantled for setting-up, maintenance or repair purposes must be refitted and checked immediately after completing the work.

## Maintenance, Care, Adjustment

The activities and intervals specified in the Instruction Manual for carrying out adjustments, maintenance and inspections must be observed and parts replaced as specified.

All hydraulic and pneumatic lines should be examined for leaks, loose connections, rubbing and damage whenever the machine is serviced. Any defects found must be remedied immediately.

## Waste, Disassembly, Disposal

Waste products should be cleared from the machine as soon as possible as not to create a fire hazard. Ensure that fuels and operating lubricants, as well as replacement parts are disposed of in a safe and ecologically acceptable manner. Note the local regulations on pollution control.

When scrapping (disassembling) the machine and its assemblies, ensure that these materials are disposed of safely. Either commission a specialist company familiar with the local regulations or note the local regulations when disposing of these materials yourself. Materials should be sorted properly.

# Repair

## Replacement Parts

We cannot accept any liability whatsoever for damage due to the use of parts made by other manufacturers or due to unqualified repair or modification of the machine.

## Repair, Electrical

The power supply must be switched off (master switch off) and secured so that it cannot be switched on again inadvertently before starting any work on live parts.

Those parts of the machine and plant on which inspection, maintenance or repair work is to be carried out must be isolated from the power supply, if specified. The isolated parts must first be checked to determine that they are truly de-energized before being grounded and short-circuited. Adjacent live parts must also be isolated.

The protective measures implemented (e.g. grounding resistance) must be tested before restarting the machine after all assembly or repair work on electric parts.

Signal generators (limit switches) and other electrical parts on the safety mechanisms must not be removed or bypassed. Only use original fuses or circuit overloads with the specified current rating. The machine must be switched off immediately if a fault develops in the electrical power supply.

The electrical equipment of our machines must be checked at regular intervals and any defects found must be remedied immediately.

If it is necessary to carry out work on live parts, a second person should be on hand to operate the emergency OFF switch or master switch with voltage release in the event of an emergency. The working area should be cordoned off and marked by a warning sign. Only use electrically insulated tools.

## Ventilation/Hazardous Gases

It is the end users responsibility to ensure adequate ventilation is provided to exhaust any and all noxious or hazardous gases that may be present in the working environment.

## Hydraulic and Pneumatic Systems

Work on hydraulic or pneumatic equipment shall only be carried out by persons with training, knowledge and experience of hydraulic systems. Pressure lines shall be depressurized before starting any repair work.

## General Liability

Liability for machine damage and personal injury is extinguished completely if any unauthorized conversions or modifications are undertaken. The machine must not be modified, enlarged or converted in any way capable of affecting safety without the manufacturer's prior approval.

## Starting Machine Movements

Read the Instruction Manual carefully to establish which keys and functions start machine movements.

## A Word to the End User

The end user has sole responsibility to enforce the use of safety procedures and guards on the machine. Any other safety devices or procedures due to local regulations should be should be retrofitted in accordance to these regulations and/or the EC Directive on the safety of machines.

Operator's position must always be readily accessible. Escape routes must always be kept clear and safety areas should be identified.

## Safety Precautions

Safety should be a constant concern for everyone. Always be careful when working with this equipment. While normal safety precautions were taken in the design and manufacture of this equipment, there are some potential safety hazards.

**Everyone involved with the operation and maintenance of this equipment should read and follow the instructions in this manual.**

**Operate the equipment only as stated in this manual. Incorrect use could cause damage to the equipment or personal injury.**

**It is the owner's responsibility to make certain that the operator reads and understands this manual before operating this equipment. It is also the owner's responsibility to make certain that the operator is a qualified and physically able individual, properly trained in the operation of this equipment.**

Specific safety warning decals are located on the equipment near the immediate areas of potential hazards. These decals should not be removed or obliterated. Replace them if they become non-readable.

- ALWAYS keep safety shields and covers in place, except for servicing.
- ALWAYS operate equipment in daylight or with adequate working lights.
- Follow daily and weekly checklists, making sure hoses are tightly secured and bolts are tightened.
- ALWAYS watch and avoid holes or deep depressions.
- ALWAYS wear adequate eye protection when servicing the hydraulic system and battery.
- NEVER operate a poorly maintained machine.
- NEVER allow persons to operate this machine without proper instruction.
- NEVER put hands or feet under any part of the machine while it is running.
- NEVER attempt to make any adjustments or repairs to the machine while running. Repairs or maintenance should be performed by trained personnel only.
- NEVER work under the machine unless it is safely supported with stands, blocks or a hoist and blocks.
- NEVER touch hot parts of machine.




## Assembly Drawings & Parts Lists

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.



**One-Stop Shopping**  
For Expendable Replacement Parts for AAC & Other Bedding Equipment Suppliers  
Toll Free: **1-866-885-5100**  
[www.atlantapartsdepot.com](http://www.atlantapartsdepot.com) • [sales@atlantapartsdepot.com](mailto:sales@atlantapartsdepot.com)

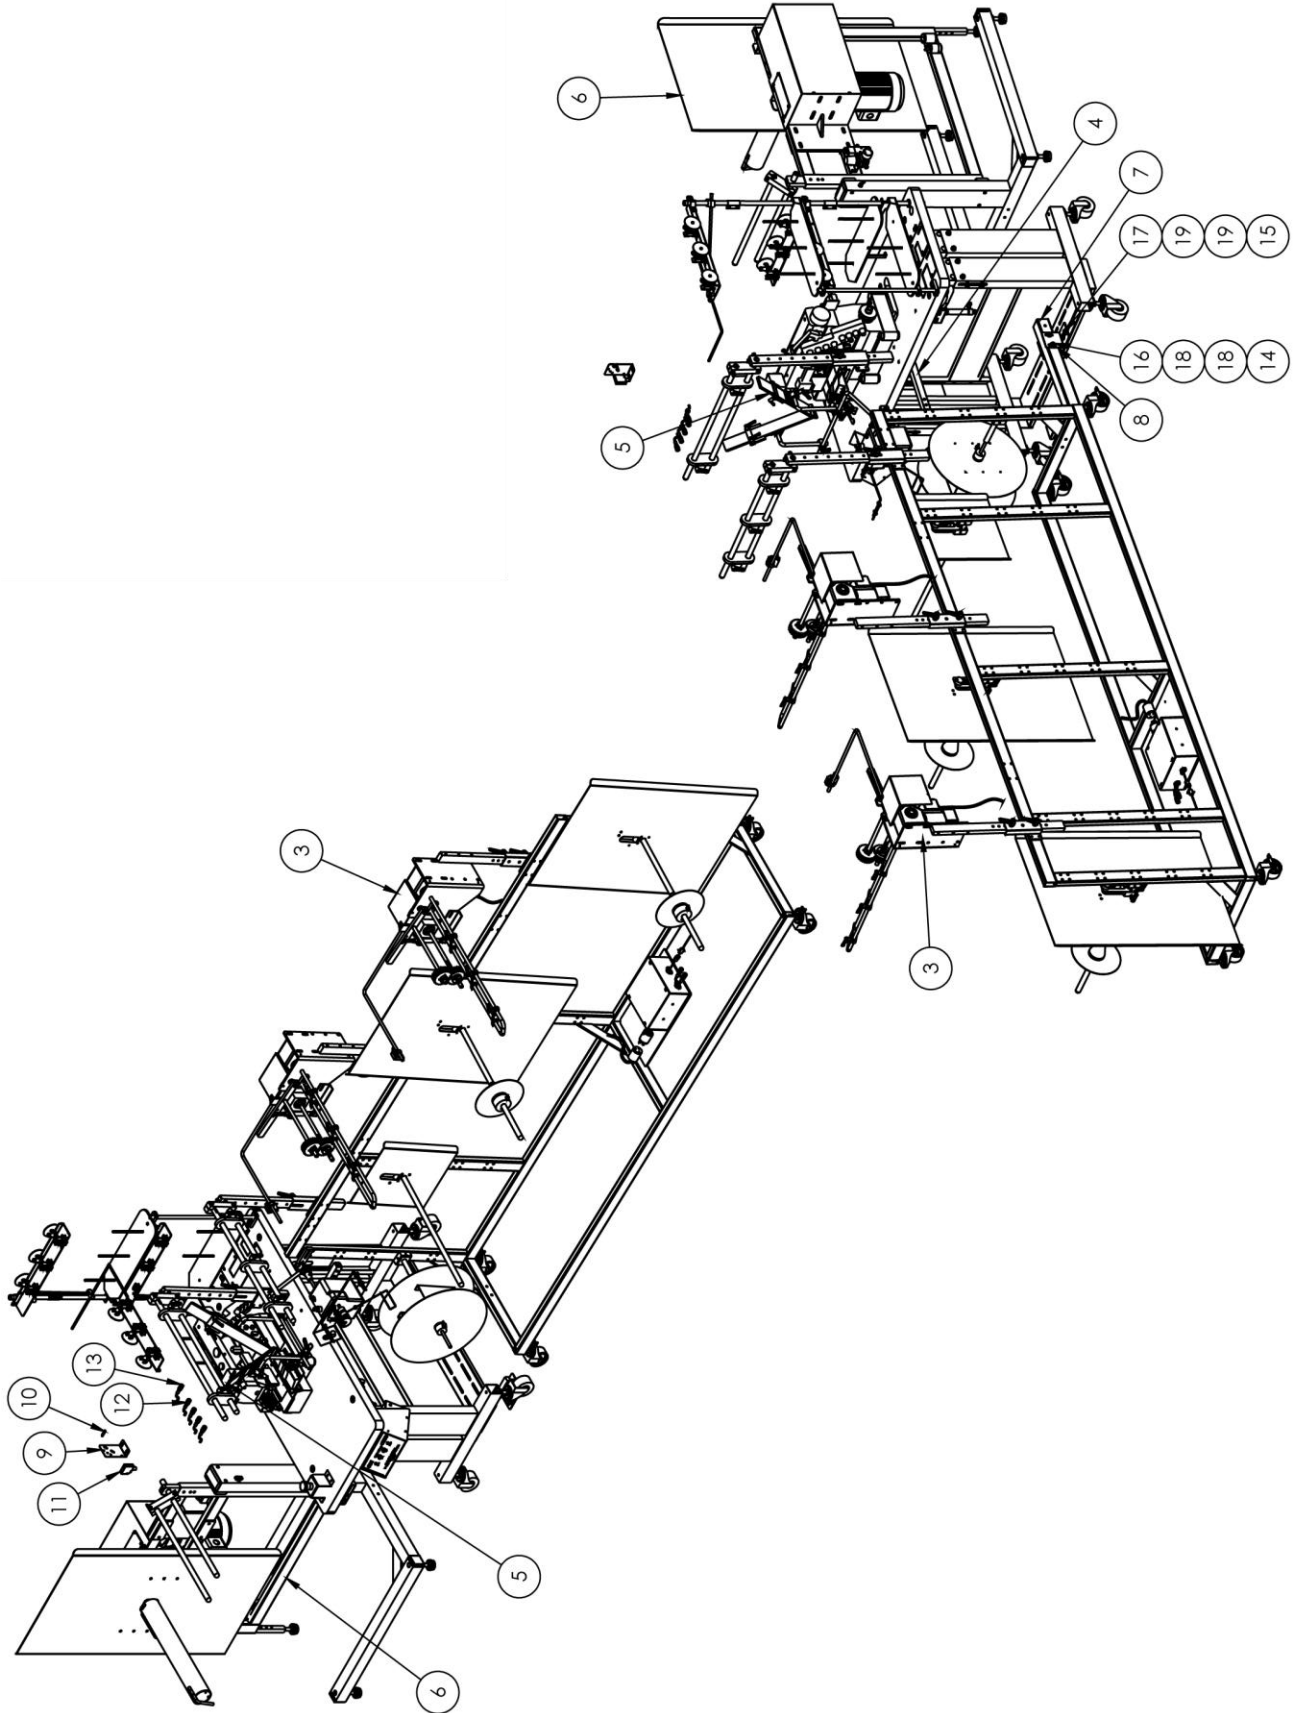




# 11330 Border Zipper Workstation

AAC Drawing Number 9000175 Rev 1

NO.	QTY	PART #	DESCRIPTION	
1	AR	1330-PD	DIAGRAM, PNEUMATIC	Page 34
2	AR	1330-WD	DIAGRAM, WIRING	Page 36
3	1	1330020	ROLL HOLDER	Page 15
4	1	1330056	BRKT, SUPPORT	
5	1	1330100	TABLE, STAND, MOTOR	Page 27
6	1	1330200	REWINDER W/MOUNTING ASSY	Page 31
7	1	1330212	BRACE FRAME ASSY.	
8	2	1330215	BRACE, FRAME	

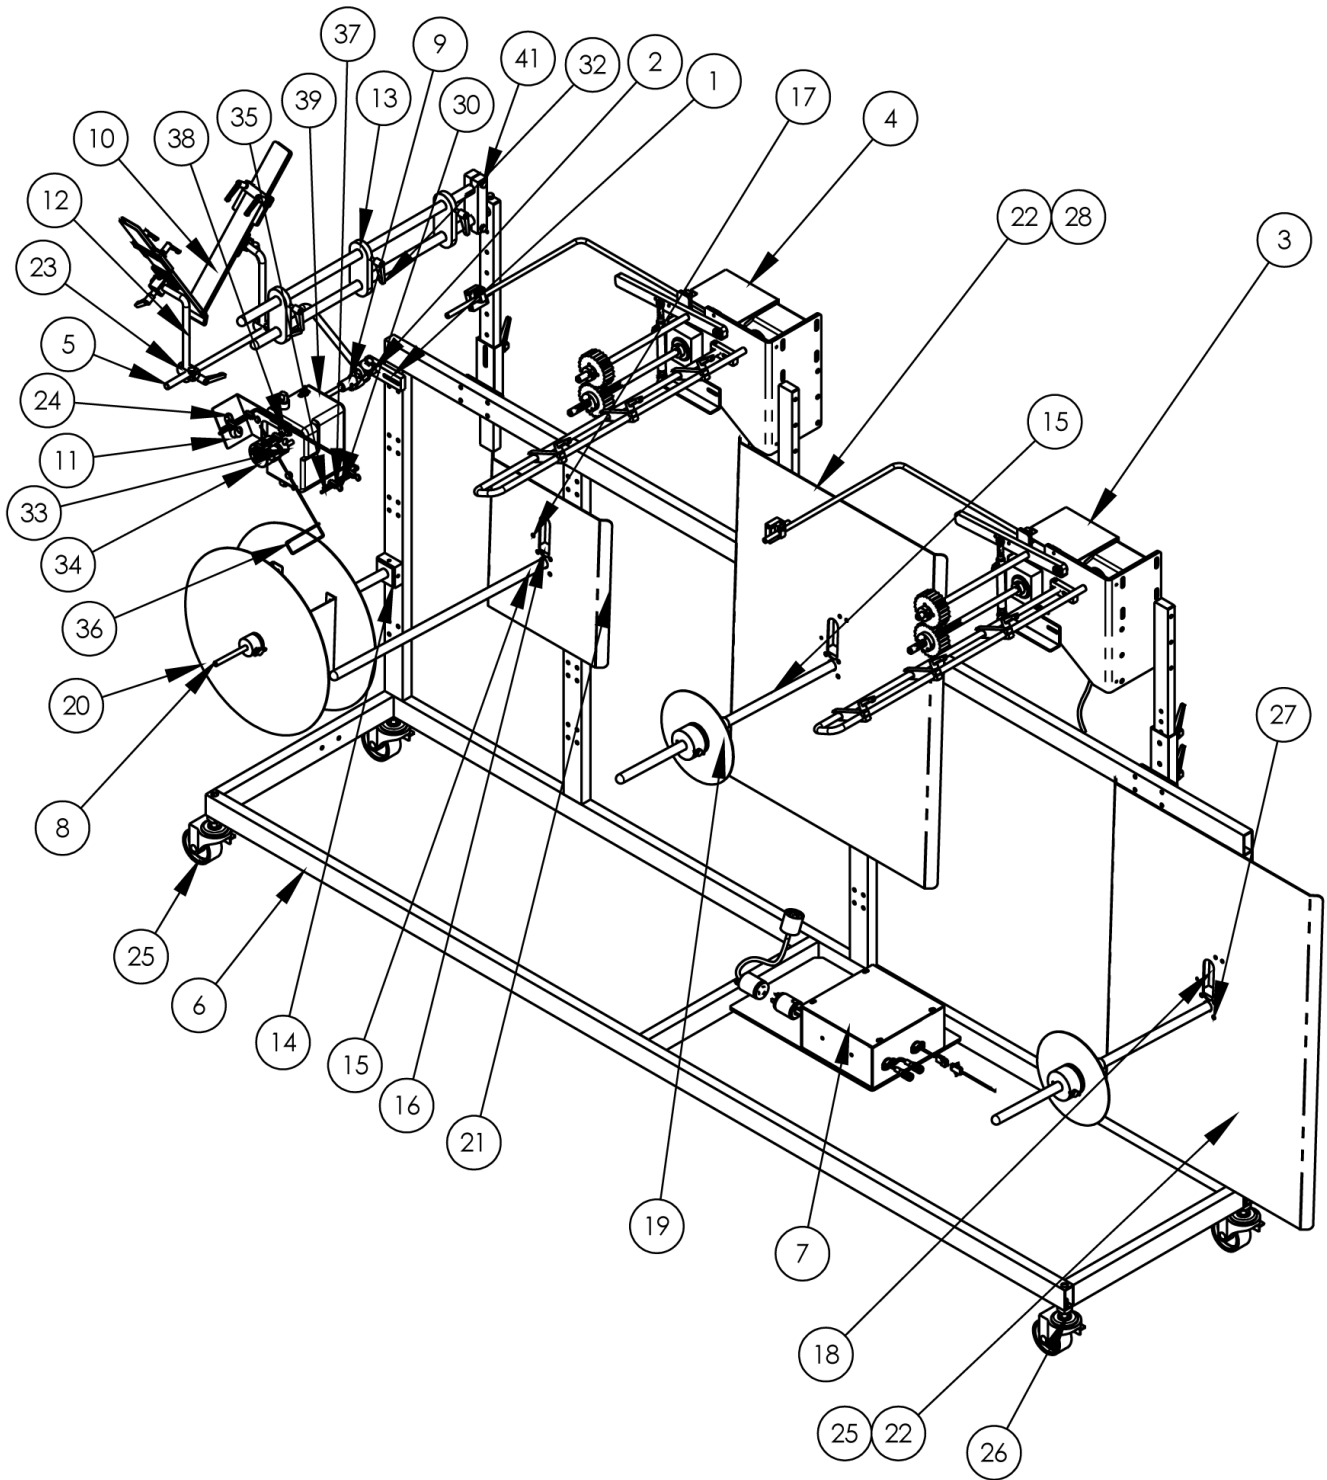


From the library of: Diamond Needle Corp

# 1330020 Roll Holder

AAC Drawing Number 1330020 Rev 5

NO.	QTY	PART #	DESCRIPTION	
1	1	1325-346A	HOLDER, ROD, 3/4", SLOT M	
2	1	28201	BLOCK,CROSS,(LARGE)	
3	1	1330006	MOTOR ASSEMBLY, UNWINDER	Page 17
4	1	1330006	MOTOR ASSEMBLY, UNWINDER	Page 17
5	1	1330009	ROD,BENT 90,1/2"CRS,4X20	
6	1	1330012	FRAME WELDMENT, 4 ROLL	
7	1	1330027	JUNCTION BOX ASSEMBLY	Page 21
8	1	1330209	ROLLER HOLDER ASSY.	
9	1	1330210	TUBE, 3/8IDX3/4OD, 6.0L	
10	2	1330220	FOLDER ASSEMBLY, 1/4" CAP	Page 22
11	1	1330223	BRACKET, SENSOR MTG	
12	2	1335-819	ROD,BENT,1/2X4X8,90 DEG	
13	1	1961-211	PLATE, EDGE GUIDE	
14	4	1961-251C	HUB, UNWIND SHAFT	
15	3	1961-252D	ROD, ROLL, 27" L	
16	3	1961-253A	HUB, UNWIND STAND	
17	1	1961-254B	COVER, DUAL EYE	
18	3	1961-255	BRACKET, SENSOR MTG	
19	2	33008708	BALL BEARING DISC ASSY	Page 23
20	1	781-1Z	DISC,BALL BEARING,ZIPPER	
21	1	784B-1414	PLATE, ALU, 14' X 14"	
22	2	784B-2436	PLATE, ALU, 23.75 X 31.75	
23	2	A-U	ROD CROSS BLOCK	
24	4	FFT18FF100Q	EYE, FIXED FIELD, 4IN	
25	4	MM503022LB	CASTER, 3" LOCKING	
26	4	NNH1/2-13	1/2-13 HEX NUT	
27	8	SSFC80016	#6-32 X 1/4 FLAT ALLEN	
28	6	SSSC80016	#6-32 X 1/4 SOC CAP	
29	2	SSSS01024	SCREW, SET, 1/4-20 X 3/8	
30	6	SST080032	SCREW, THUMB, 6-32 X 1/2	
31	2	TTH32415	HANDLE, THREADED, 1/4-20X7/	
32	5	TTH32416	HANDLE, THRD, 1/4-20X1-1/8	
33	1	W1000A-1	ROLLER, 1" GROOVED	
34	1	W1001-A	ROLLER, 2" GROOVED	
35	2	W1007B	ROD, 5/32 X 3-5/8"	
36	1	W1017	WIRE, ACTIVATOR	
37	6	W1018	GUIDE BLOCK	
38	1	W13	GUIDE, MATERIAL SIDE	
39	1	W2110E-01	TAPE FEEDER	
40	AR	1330-WD	DIAGRAM, WIRING 1330	Page 36
41	1	1347094	TENSION ASSEMBLY	Page 25

From the library of: Diamond Needle Corp

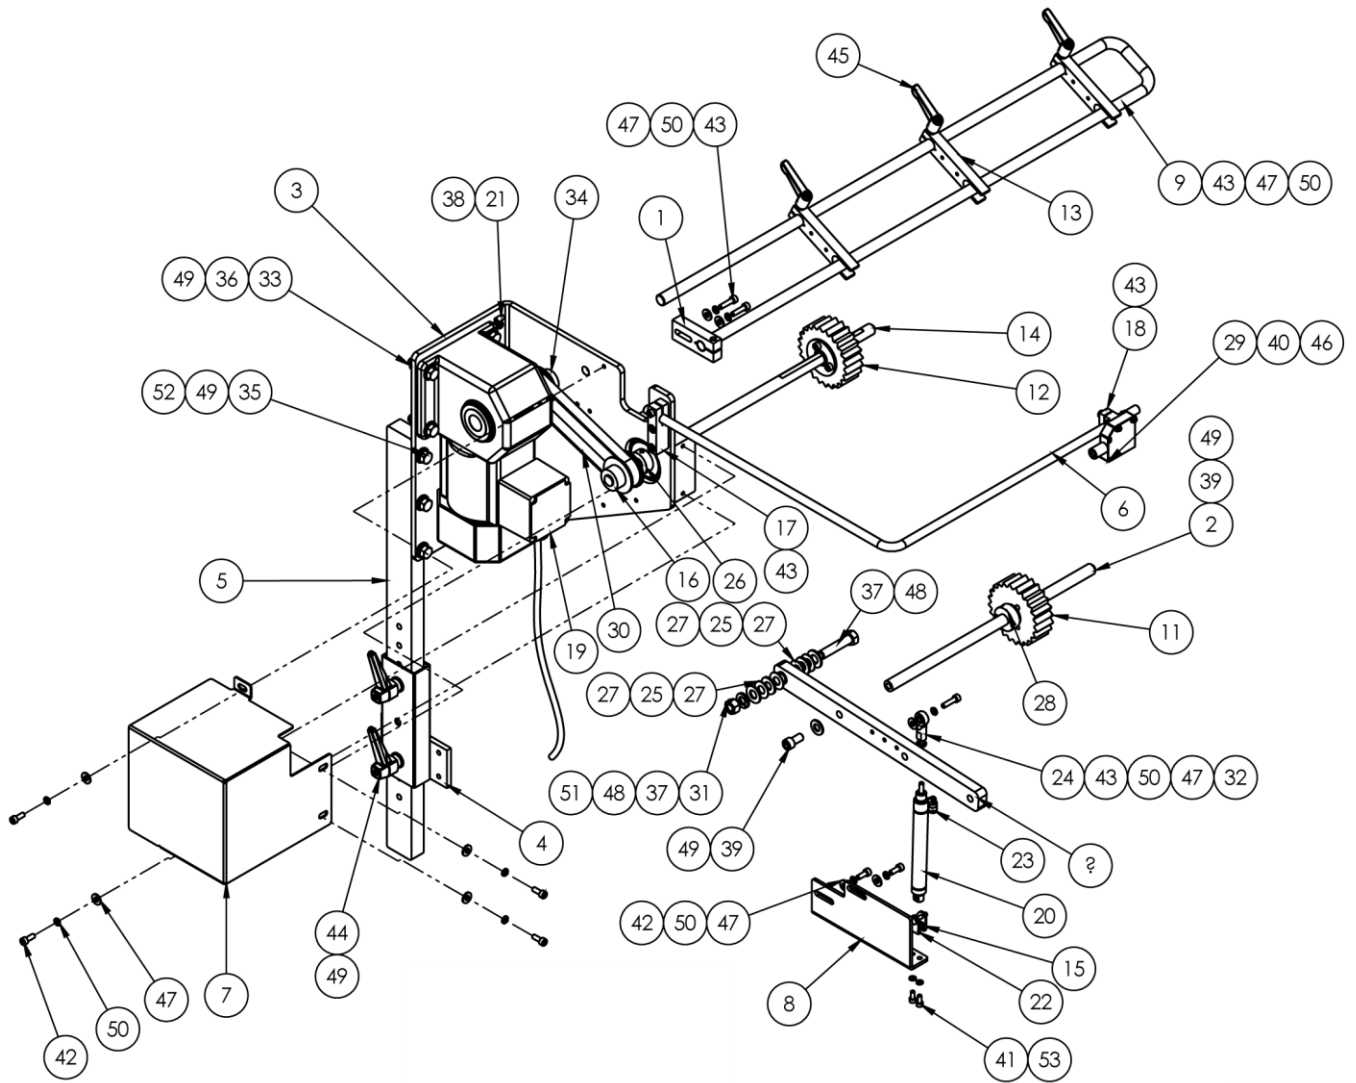

From the library of: Diamond Needle Corp

# 1330006 Unwinder Motor Assembly


AAC Drawing Number 1330006 Rev 2

NO.	QTY	PART #	DESCRIPTION	NO.	QTY	PART #	DESCRIPTION
1	1	1325-346	HOLDER,ROD,1/2 D,SLOT MNT	28	2	CCCL8F	CLAMP COLLAR- 1/2
2	1	1330017	SHAFT, IDLER ROLLER	29	1	FFQM42VN6A	EYE,ELECTRIC,10-30VDC
3	1	1330018	MOTOR MOUNT WELDMENT	30	1	GG157L050	BELT,GEAR,3/8P,1/2W
4	1	1330019	SUPPORT, UNWINDER	31	1	NNH3/8-16	3/8-16 HEX NUT
5	1	1330022	SUPPORT, UNWINDER	32	1	NNJ10-32	NUT,JAM,THIN #10-32
6	1	1330025	ROD,BENT,CRS,1/2 OD	33	4	NNK5/16-18	KEP NUT, 5/16-18
7	1	1330026	BELT, COVER	34	1	PP12LF050-3/4	PULLEY,GEAR,3/8P,.50B,12T
8	1	1330055	BRACKET, CYLINDER	35	3	SSHC10064	5/16-18 X 1" HEX HEAD
9	1	1335-837A	ROD,1/2 DIA, 180 DEG	36	4	SSHC10080	5/16-18 X 1-1/4 HEX HEAD
10	1	1335189	LINK, IDLER ROLLER	37	1	SSHC25112	3/8-16 X 1-3/4 HEX HEAD
11	1	1335497	ROLLER, FLUTTED, IDLER,	38	2	SSPS90024	#8-32 X 3/8 PAN HD SLOT
12	1	1335498	DRIVE ROLLER, FLUTTED	39	1	SSSC10040	5/16-18 X 5/8 SOC CAP
13	3	1335499	ARM, 1/2" ROD CLAMP	40	2	SSSC70048	#4-40 X 3/4 SOC CAP
14	1	1335738	SHAFT, DRIVE ROLLER	41	2	SSSC90024	#8-32 X 3/8 SOC CAP
15	1	1335M-2046	PLATE,NUT,8-32@.43 CTC	42	6	SSSC98032	#10-32 X 1/2 SOC CAP
16	1	211-057	PULLEY, 3/8P, 12T,1/2B	43	7	SSSC98048	#10-32 X 3/4 SOC CAP
17	1	23080A	BLOCK,CLAMP,EYE	44	2	TTH32425	HANDLE,THRDED,5/16-18X3/4
18	1	23132A	HOLDER, EYE	45	3	TTH34311	HANDLE,THREADED,10-24X3/4
19	1	23218DM	MOTOR ASSY,GEAR	46	2	WWF4	WASHER, FLAT #4
20	1	AAC8DP-3	CYLINDER,AIR,DA	47	9	WWFS10	WASHER, FLAT #10
21	2	AAF1/8	1/8" PLASTIC CLAMP	48	2	WWFS3/8	WASHER, FLAT, 3/8
22	1	AAFBP-8C	BRKT,PIVOT,5/32 BORE	49	14	WWFS5/16	WASHER, FLAT, 5/16
23	1	AAQME-5-10	ELBOW, MALE,5/32X10-32	50	9	WWL10	#10 LW
24	1	BBAW-3Z	BRG,ROD END,F, 10-32	51	1	WWL3/8	3/8 LW
25	2	BBNTA613	BEARING,THRUST,375BORE	52	3	WWL5/16	5/16 LW
26	2	BBS8701-88	BEARING,BALL,.50IDX1.75OD	53	2	WWL8	#8 LW
27	4	BBTRA613	WASHER,THRUST,STL, .375B				

Page 18

Page 19

From the library of: Diamond Needle Corp

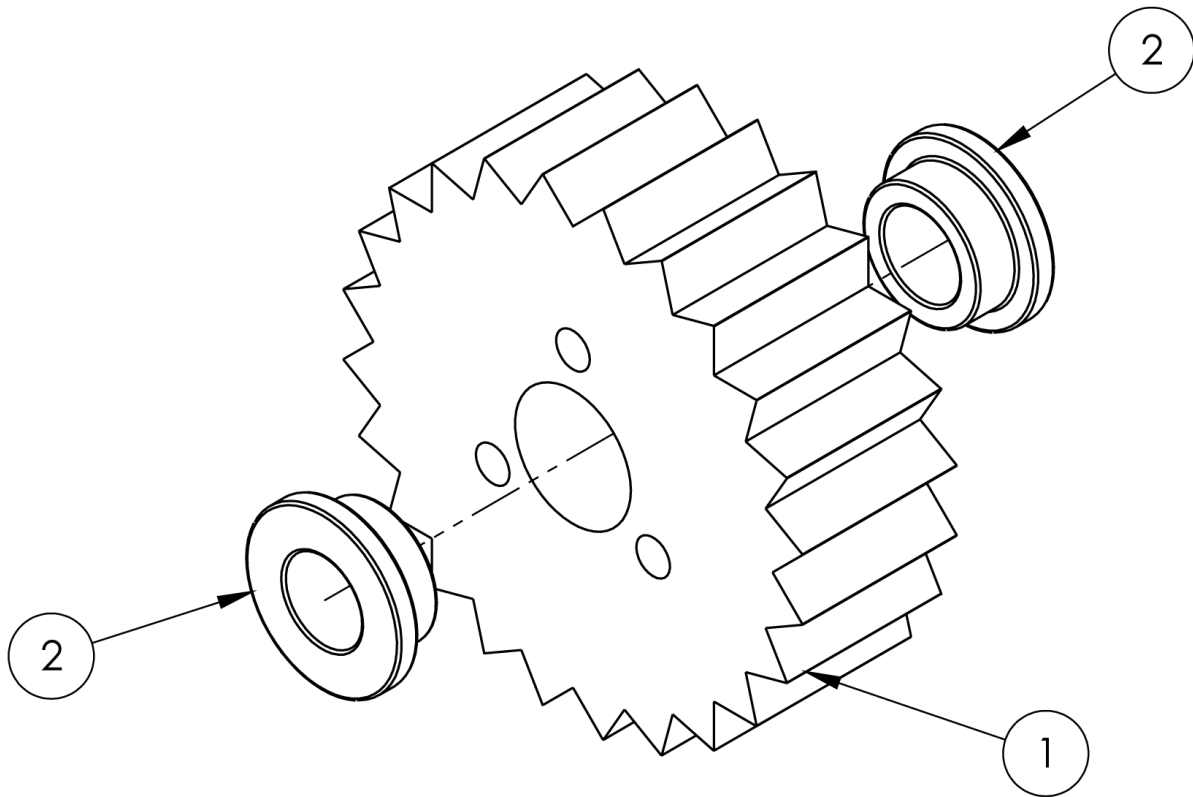


From the library of: Diamond Needle Corp

## 1335497 Idler Fluted Roller

AAC Drawing Number 1335497 Rev 1

NO.	QTY	PART #	DESCRIPTION
1	1	1335496	PLASTIC FLUTED ROLLER
2	2	UUFF723-05	BRONZE BEARING

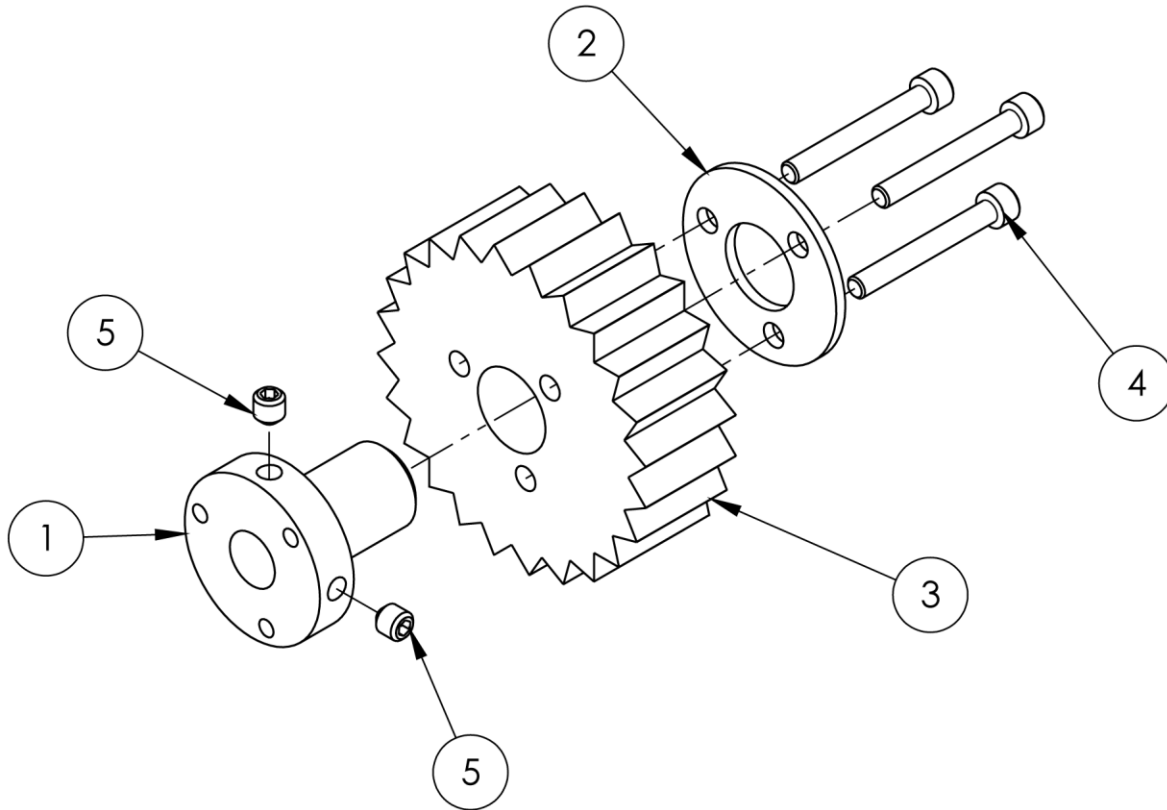


From the library of: Diamond Needle Corp

## 1335498 Fluted Drive Roller

AAC Drawing Number 1335498 Rev 1

NO.	QTY	PART #	DESCRIPTION
1	1	1335107	HUB, DRIVE ROLLER
2	1	1335127	PLATE, WASHER
3	1	1335496	ROLLER, FLUTED, PLASTIC
4	3	SSSC98096	#10-32 X 1-1/2 SOC CAP
5	2	SSSS01016	1/4-20 X 1/4 KNUURL PT

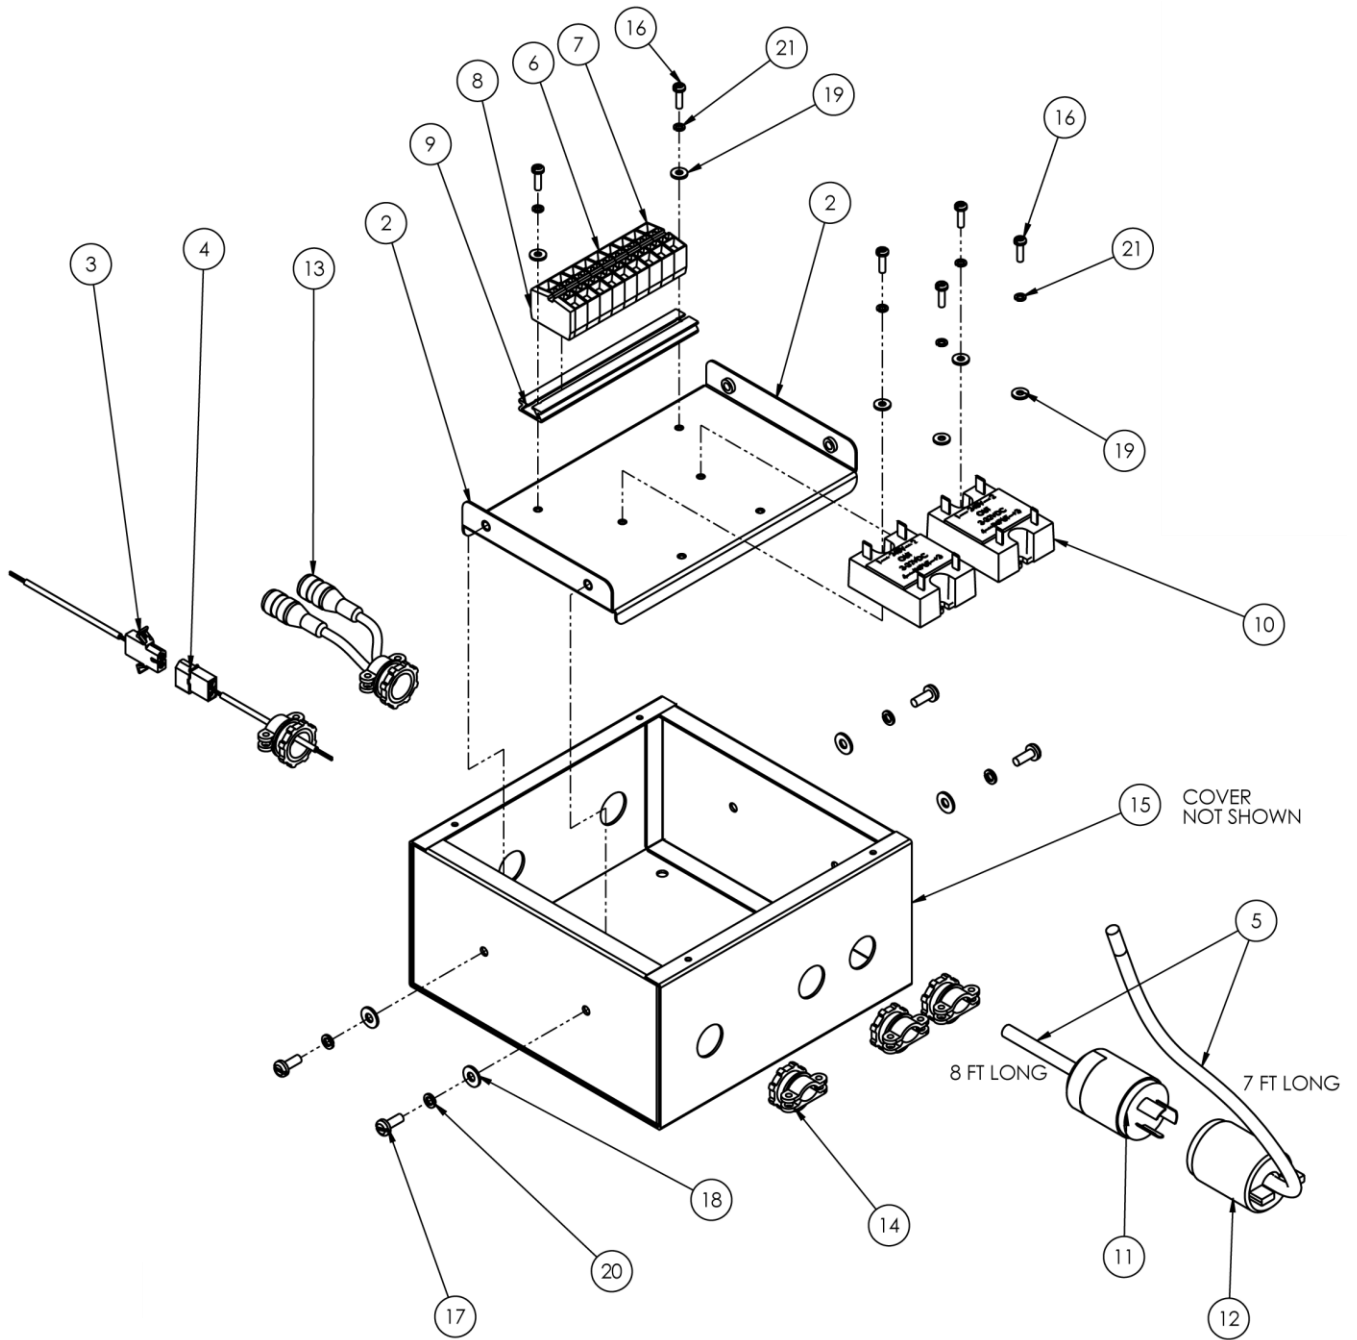




# 1330027 Junction Box Assembly

AAC Drawing Number 1330027 Rev 1

NO.	QTY	PART #	DESCRIPTION
1	*AR	1330-WD	WIRING DIAGRAM
2	1	1330028	MOUNT, WAGO & RELAY
3	1	1335S-510	CABLE, 2 PIN FM MOLEX
4	1	4080-4219	CABLE, UNWINDER 24vDC
5	*15'	FF19509	CABLE, 3 COND, 18 AWG, SJTOW
6	8	FF264-341	TERMBLK, WAGO, TOP, DUAL, GRY
7	1	FF264-347	TERMBLK, WAGO, TOP, DUAL, GRN
8	1	FF264-371	TERMBLK, WAGO, TOP, END
9	1	FF264-3BKT5	MOUNT, WAGO, 9 DBLS
10	2	FFD2425F	RELAY, SSR, 24VAC, 25A
11	1	FFHBL4570C	PLUG, 2P/3W, GROUNDING
12	1	FFHBL4579C	RECEPTACLE, 3 POLE, 3W
13	2	FFRK44T-4	CABLE, EYE, 12', NO END
14	5	K-235	CONNECTOR, ROMEX, 1/2"
15	1	K-SC884M	8X8X4 JUNCTION BOX, MOD
16	6	SSPS80032	#6-32 X 1/2 PAN HD SLOT
17	4	SSPS98032	#10-32 X 1/2 PAN HD SLOT
18	4	WWFS10	WASHER, FLAT #10
19	6	WWFS6	WASHER, FLAT, #6
20	4	WWL10	#10 LW
21	6	WWL6	WASHER, LOCK, 6

Page 36

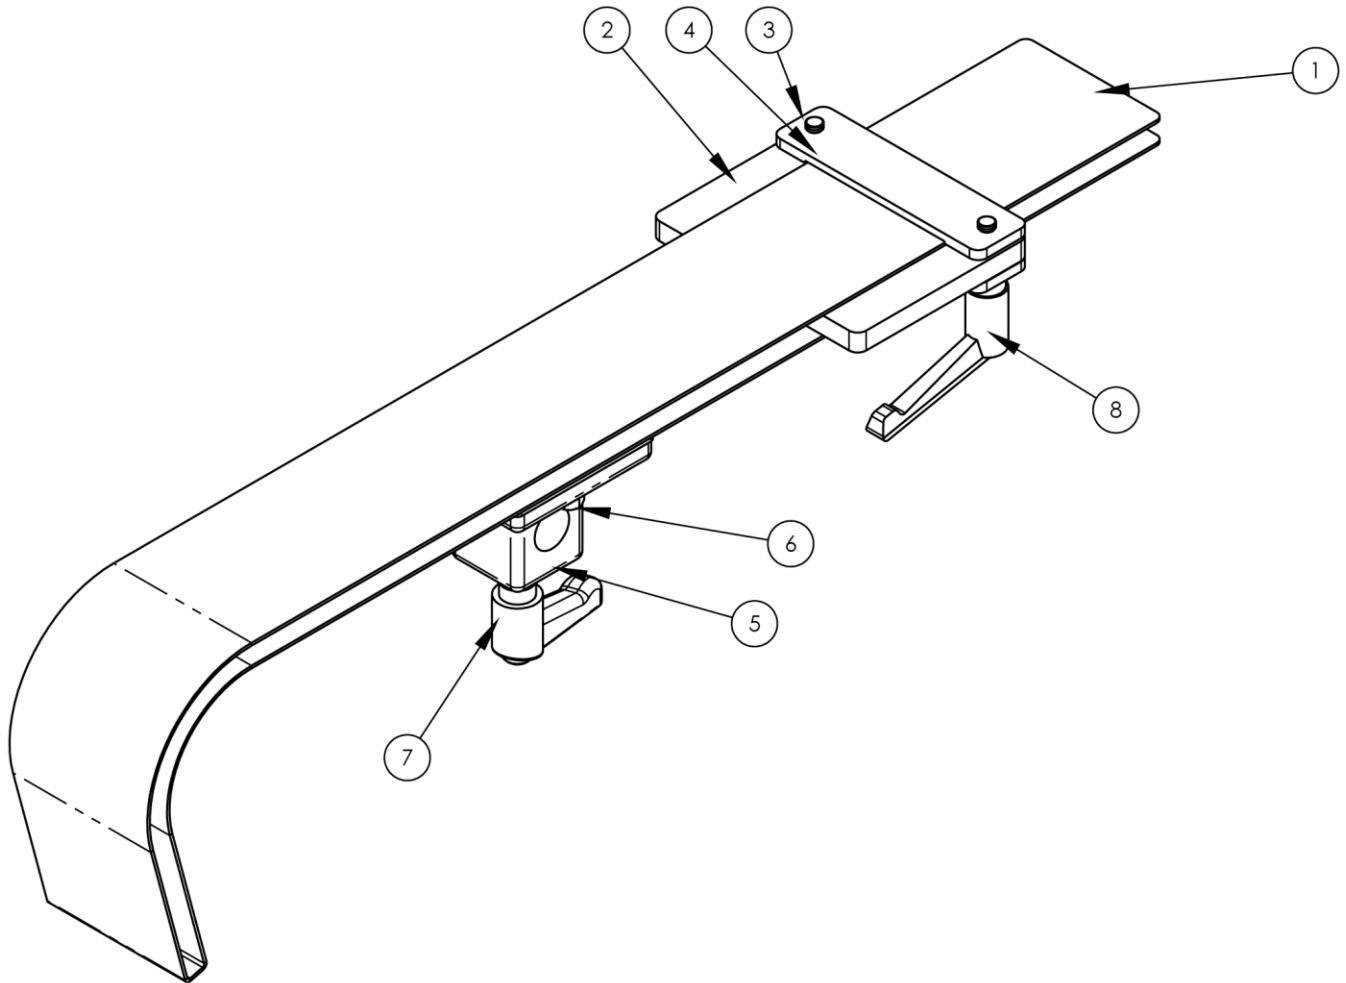


From the library of: Diamond Needle Corp

## 1330220 Folder Assembly/ ¼ "cap

AAC Drawing Number 1330220 Rev 1

NO.	QTY	PART#	DESCRIPTION
1	1	1330216	BORDER GUIDE ASST.
2	1	1330217	SPACER, FOLDER
3	1	1330219	PLATE,NUT,10-32 X 2
4	1	1330221	PLATE,WASHER,#10 X 2
5	1	311-154	MACHINE MOUNT,1/2" HOLE
6	4	NNK8-32	NUT,KEP,8-32
7	1	TTH32415	HANDLE,THREADED,1/4-20X7/
8	2	TTH48070	HANDLE,THREADED 10-32X.63

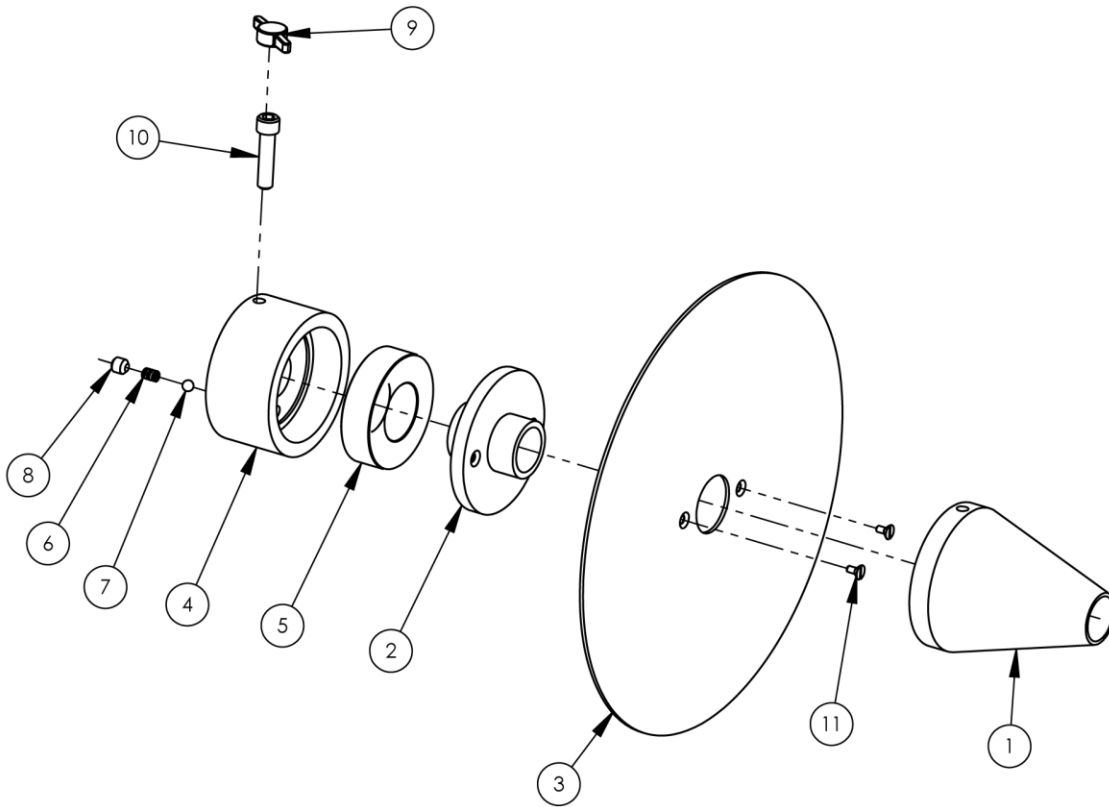


## 33008708 Ball Bearing Disc Assembly

AAC Drawing Number 9000904 Rev 4

NO.	QTY	PART #	DESCRIPTION
1	1	33008604	CONE, SPOOL
2	1	33008602	HUB, FLANGE 3/4 BORE
3	1	SEE CHART	SEE CHART
4	1	33008601	HUB, CENTER, 3/4 SHAFT
5	1	BB23216-88	BEARING, BALL, 1.0B
6	1	RRLC026B1	SPRING, COMP .026X.18X.25
7	1	JJ012	3/16 DIA. BALL
8	1	SSSP01016	1/4-20 X 1/4 NYLOCK
9	1	SSW#1_4	WING SCREW KNOB
10	1	SSSC01064	1/4-20 X 1 SOC CAP
11	2	SSFS80016	6-32 X 1/4, FLAT SLOT



-	BALL BEARING	DISC ASSEMBLY	33008732
3	1	33008632	DISC 32" DIA
-	BALL BEARING	DISC ASSEMBLY	33008724
3	1	33008624	DISC 24" DIA
-	BALL BEARING	DISC ASSEMBLY	33008716
3	1	33008616	DISC 16" DIA
-	BALL BEARING	DISC ASSEMBLY	33008708

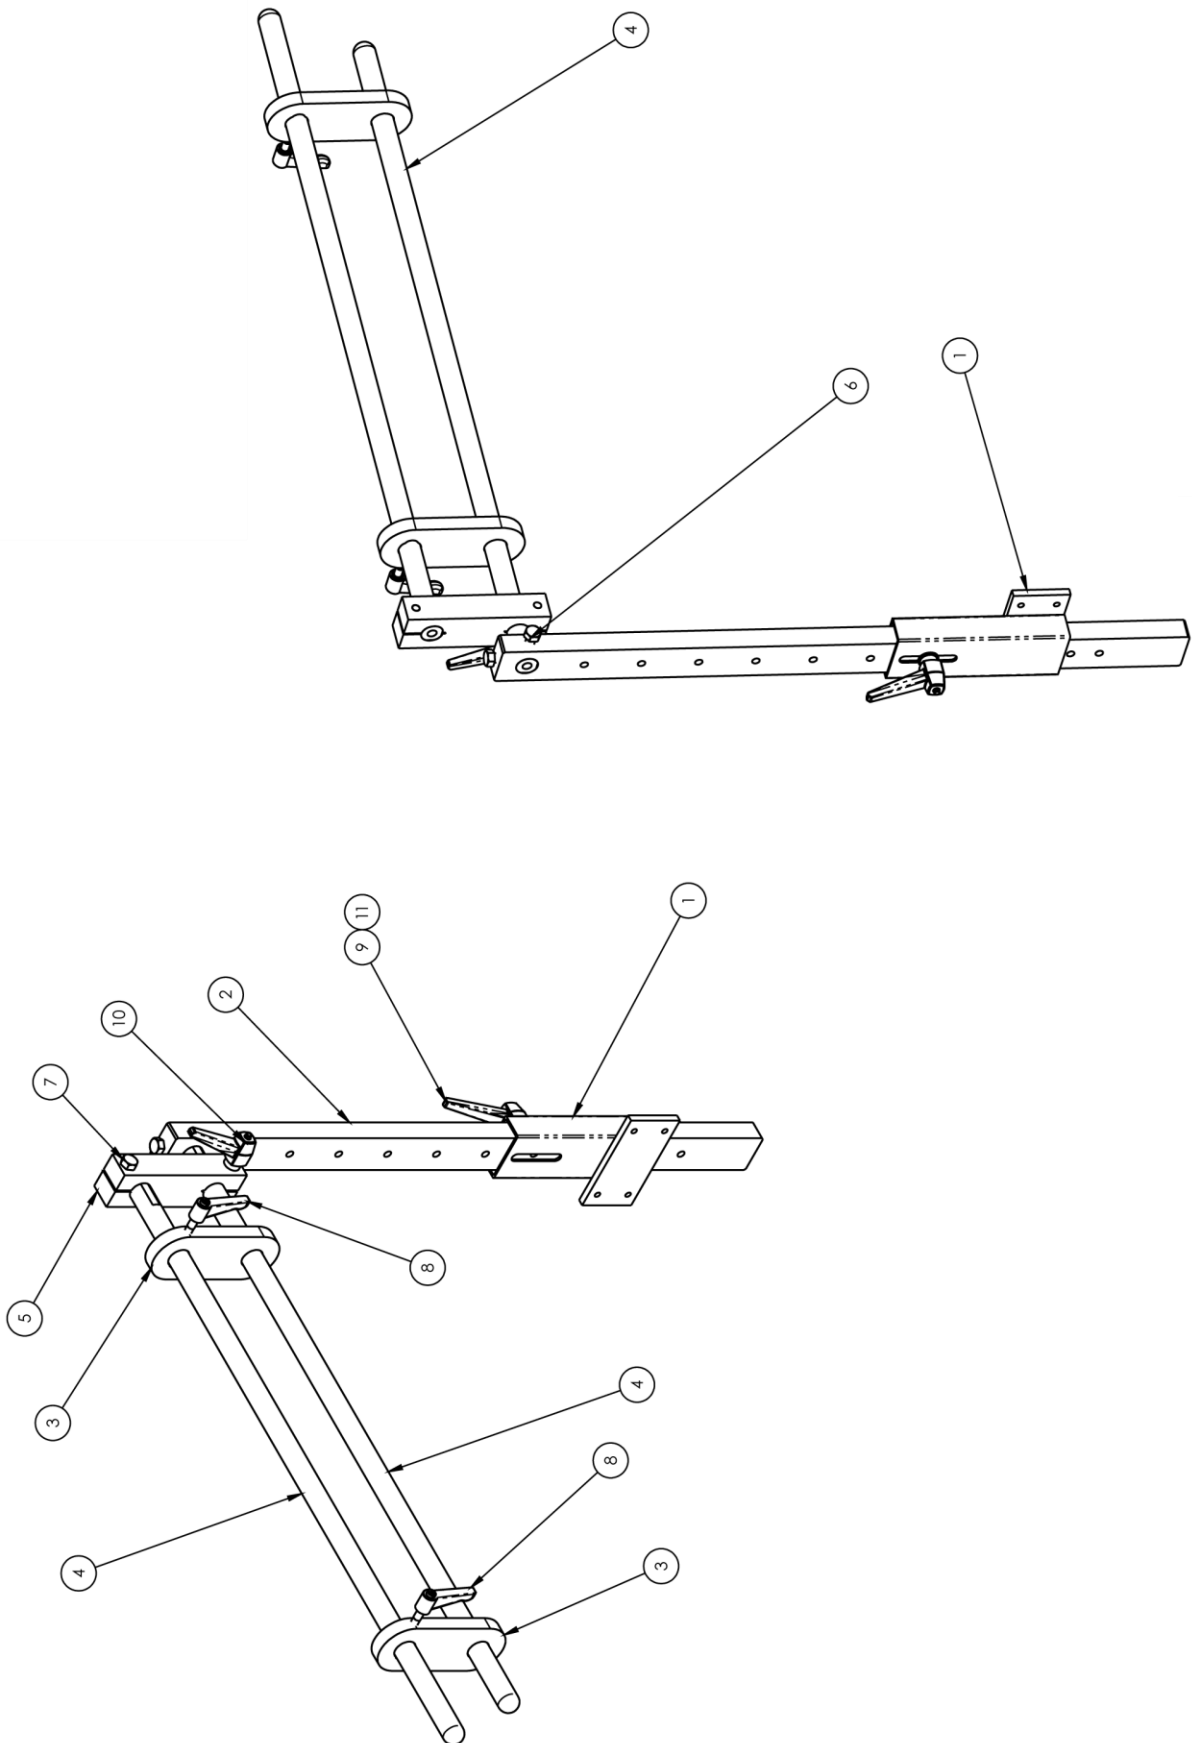

# 1347094 Tension Assembly

AAC Drawing Number 1347094 Rev 2

NO.	QTY	PART #	DESCRIPTION
1	1	1347093	SUPPORT, TENSIONER
2	1	1347097	SUPPORT, TENSIONER
3	2	1961-211	PLATE, EDGE GUIDE
4	2	1961-252D	ROD, ROLL, 27" L
5	1	1962-3201	CLAMP, 3/4 ROD, 3" CTC
6	2	SSHC10048	5/16-18 X 3/4 HHCS
7	1	SSHC10096	5/16-18 X 1-1/2 HHCS
8	2	TTH32416	HANDLE, THRD, 1/4-20X1-1/8
9	1	TTH32425	HANDLE, THRDED, 5/16-18X3/4

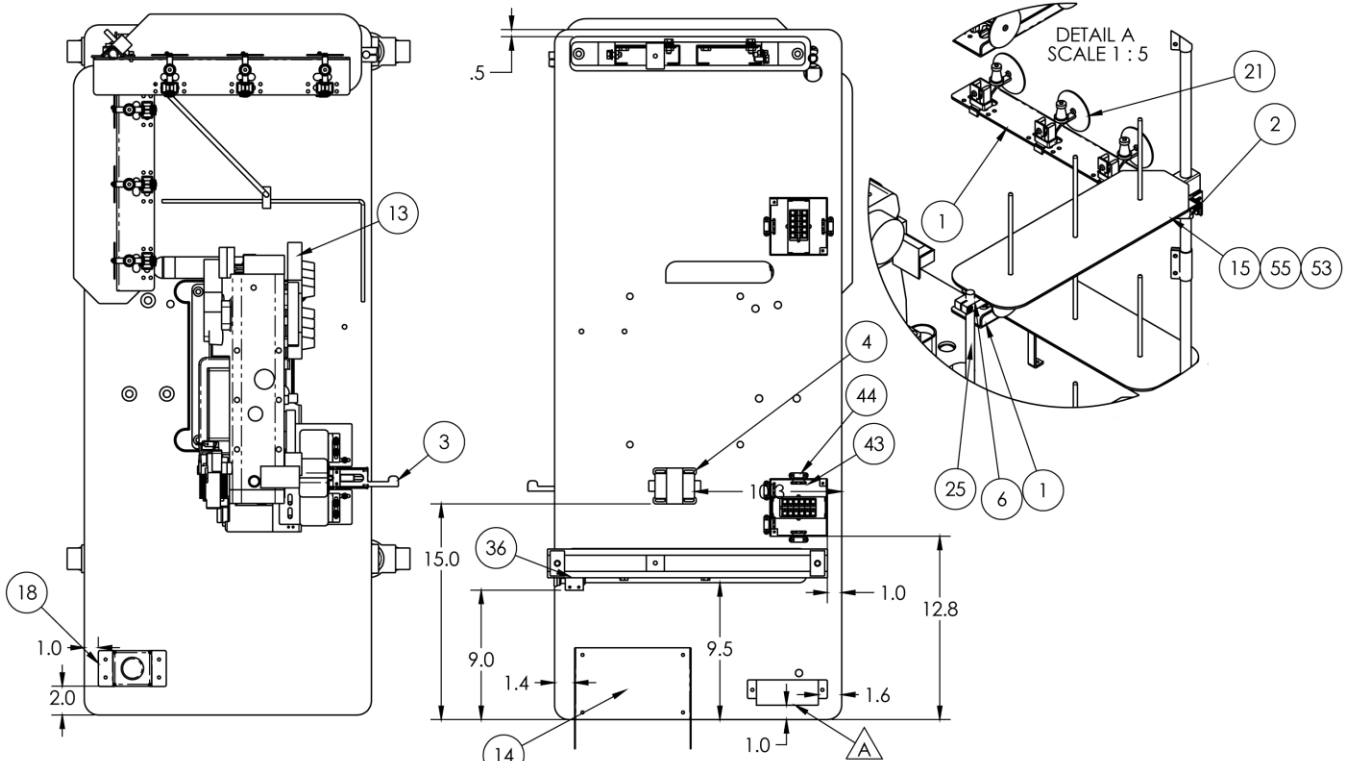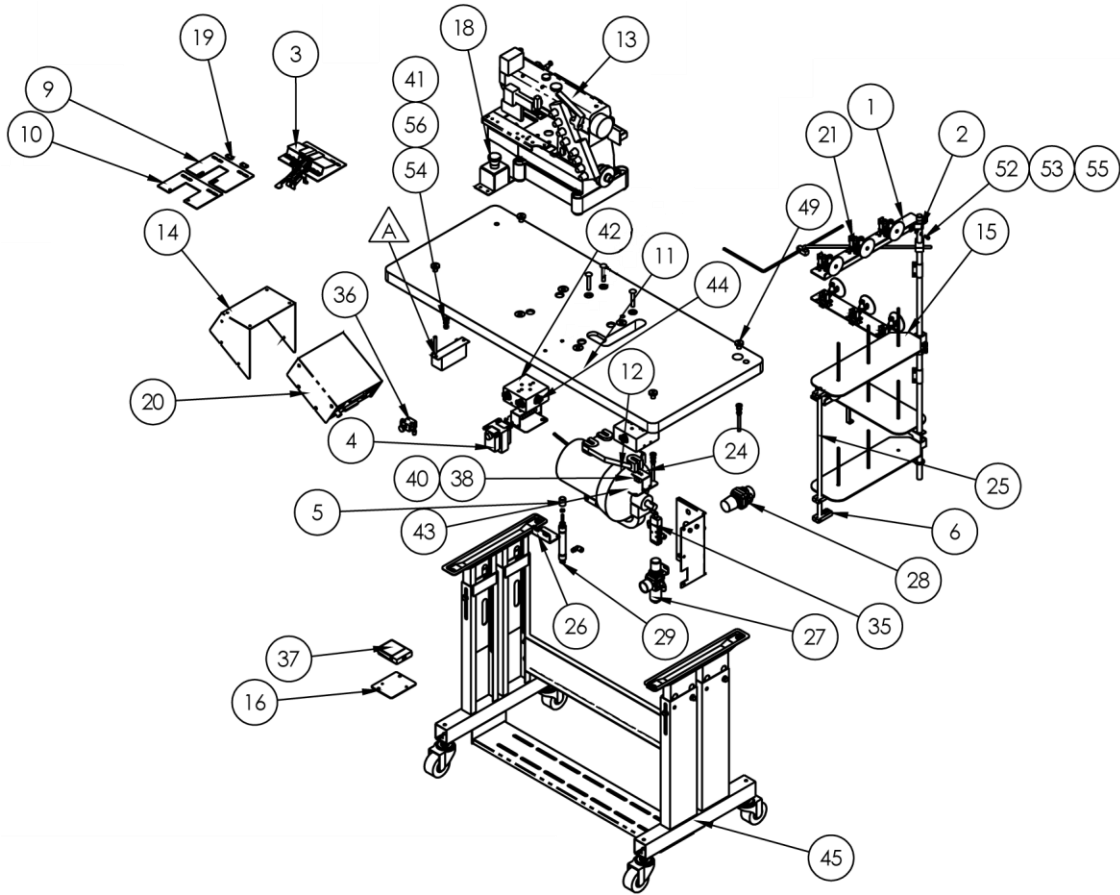

**TABLE TOP**  
ALL DIMENSIONS ARE APPROXIMATE ONLY

**TABLE BOTTOM**  
ALL DIMENSIONS ARE APPROXIMATE ONLY  
TABLE LEGS HIDDEN

# 1330100 Table, Stand, Motor


AAC Drawing Number 1330100 Rev 7

Page 34  
Page 36

Page 29

NO.	QTY	PART #	DESCRIPTION	NO.	QTY	PART #	DESCRIPTION
1	3	0411-069C	BRKT,THREAD BRK DETECTION	30	1	AAF122A-A	1/8" NPT HEX CLOSE
2	3	0411-070	CLAMP, SENSOR BRACKET	31	1	AAF23224X2	BUSHING, BRASS
3	1	502	HEMMER L&R,W/TENSION BOX	32	1	AAQMC-4-4	QUICK MALE CONN 1/4 X 1/4
4	1	4030	TRANSFORMER,220 INPUT	33	1	AAQME-4-8	ELBOW,QUICK MALE,1/4X1/8
5	1	11200	BUMPER,1/4-28	34	4	AAQME-5-8	QUICK MALE ELBOW
6	3	1325-346	HOLDER,ROD,1/2 D,SLOT MNT	35	1	AAV125B	PILOT VALVE
7	AR	1330-PD	PNEUMATIC DIAGRAM	36	1	AAVMB33	SWITCH,AIR,3 WAY,W/EXH
8	AR	1330-WD	ELECTRICAL DIAGRAM	37	1	EE24F163	FOOTSWITCH, TREADLITE
9	AR	1330015	PLATE, 1-3/8" Z-BOX MOUNT	38	9	FF264-341	TERMBLK,WAGO, TOP,DUAL,GRY
10	AR	1330016	PLATE, 2" Z-BOX MOUNT	39	2	FF264-347	TERMBLK,WAGO, TOP,DUAL,GRN
11	1	1330222	TABLE, TOP	40	2	FF264-371	TERMBLK,WAGO, TOP,END
12	2	1330225	BRKT, WAGO BLOCK	41	4	K-102-21	ROD,TH,5/16-18,2-1/2L
13	1	1334-1000B	SEWING HEAD DETAIL	42	2	K-233	BOX,ELECTRICAL,SQUARE
14	1	1959-120	BRKT,MOUNTING,4000D	43	2	K-234	COVER,4IN SQUARE
15	3	1959-161	3 POS THREAD PLATE ASSY.	44	6	K-235	CONNECTOR,ROMEX,1/2"
16	1	1961-159	PLATE, MOUNT, FOOT PEDAL	45	1	K-4D	HD T LEG ADJ STAND
17	1	1961-904A	MOUNT, REGULATORS	46	4	NNH5/16-18	5/16-18 HEX NUT
18	1	213-005	STOP BUTTON BOX ASSY	47	1	NNJ1/4-28	NUT, HEX, JAM, 1/4-28
19	AR	40-576	PLATE,NUT,10-32@.75 CTC	48	2	NNK10-32	KEP NUT, 10-32
20	1	4000D-500	CONTROL BOX	49	4	NNM103	NUT,RECESSED,5/16-18
21	8	4003-IS3WT2	SENSOR,THREAD BREAK	50	1	PPM616	PULLEY,MOTOR,2-3/8
22	1	4003-MA3/FE	CABLE,M TO FM,3'	51	2	SSBC98064	10-32 X 1.0 BUTTON CAP SC
23	2	4003-MA4/FE	ADAPTER,4M TO 1F	52	3	SSSC98032	10-32X1/2, SOC CAP
24	1	4058-2	MOTOR,3/4HP,110/220V,1PH	53	5	WWFS10	WASHER, FLAT, #10, SAE
25	1	8732-1280	ROD, STRAIGHT, 1018	54	4	WWFS5/16	WASHER,FLAT,SAE,5/16
26	1	97-2602	BRACKET, CLUTCH CYLINDER	55	3	WWL10	WASHER,LOCK,#10
27	1	AA198-5102	REGULATOR W/GAUGE & NUT	56	4	WWL5/16	WASHER, LOCK, 5/16
28	1	AA198-RP3	REGULATOR,PRECISION AIR	57	1	ZX3834	V BELT,3/8 X 34"
29	1	AAC7DP-2	CYLINDER,AIR,DA				

From the library of: Diamond Needle Corp

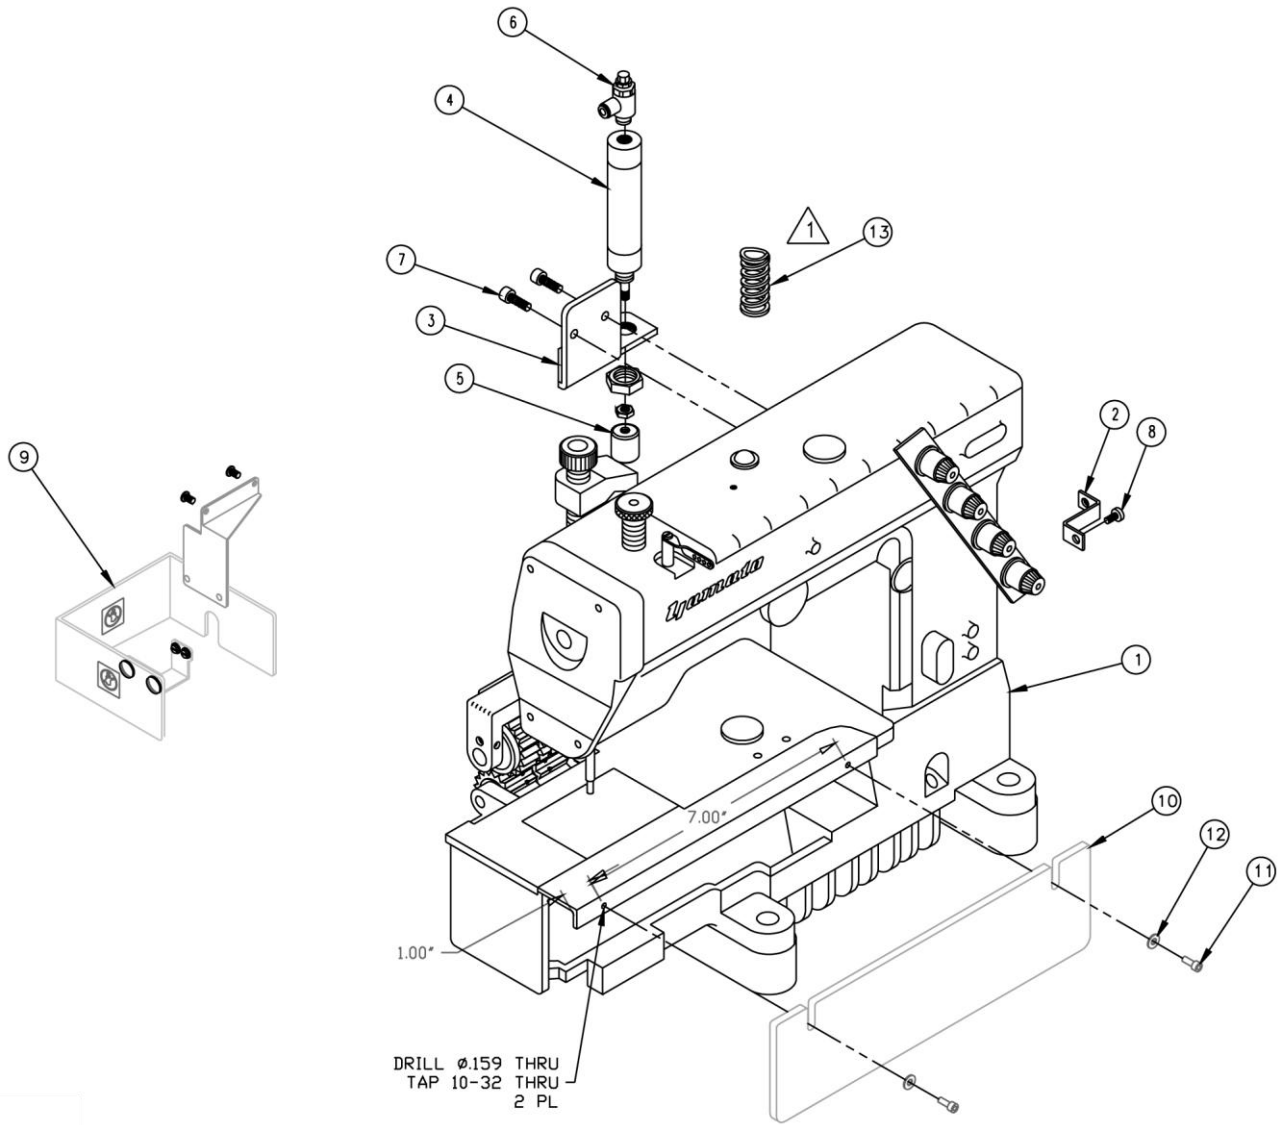


From the library of: Diamond Needle Corp



# 1334-1000B Sewing Head Detail

AAC Drawing Number 192928C Rev 2

NO.	QTY	PART #	DESCRIPTION
1	1	SYAM-1804A	Yam. Sewing HD
2	1	0411-1051	Yam. Guard Brkt
3	1	112013	Bracket
4	1	AAC6S-1-H	Air Cylinder
5	1	11200A	Bumper
6	1	AA198RR508	Flow Control
7	2	SSSCM6X20	Screw,Socket Cap M6 x 20MM
8	1	SSCM6X10	Screw, Cheese, Head M6 x 1 x 10MM
9	1	1959-412	Guard
10	1	1334041	Guard,THRD Guides
11	2	SSSC98032	Screw, Socket Cap
12	2	WWFS10	Flat Washer
13	AR	RRLC105J10	Spring Presser

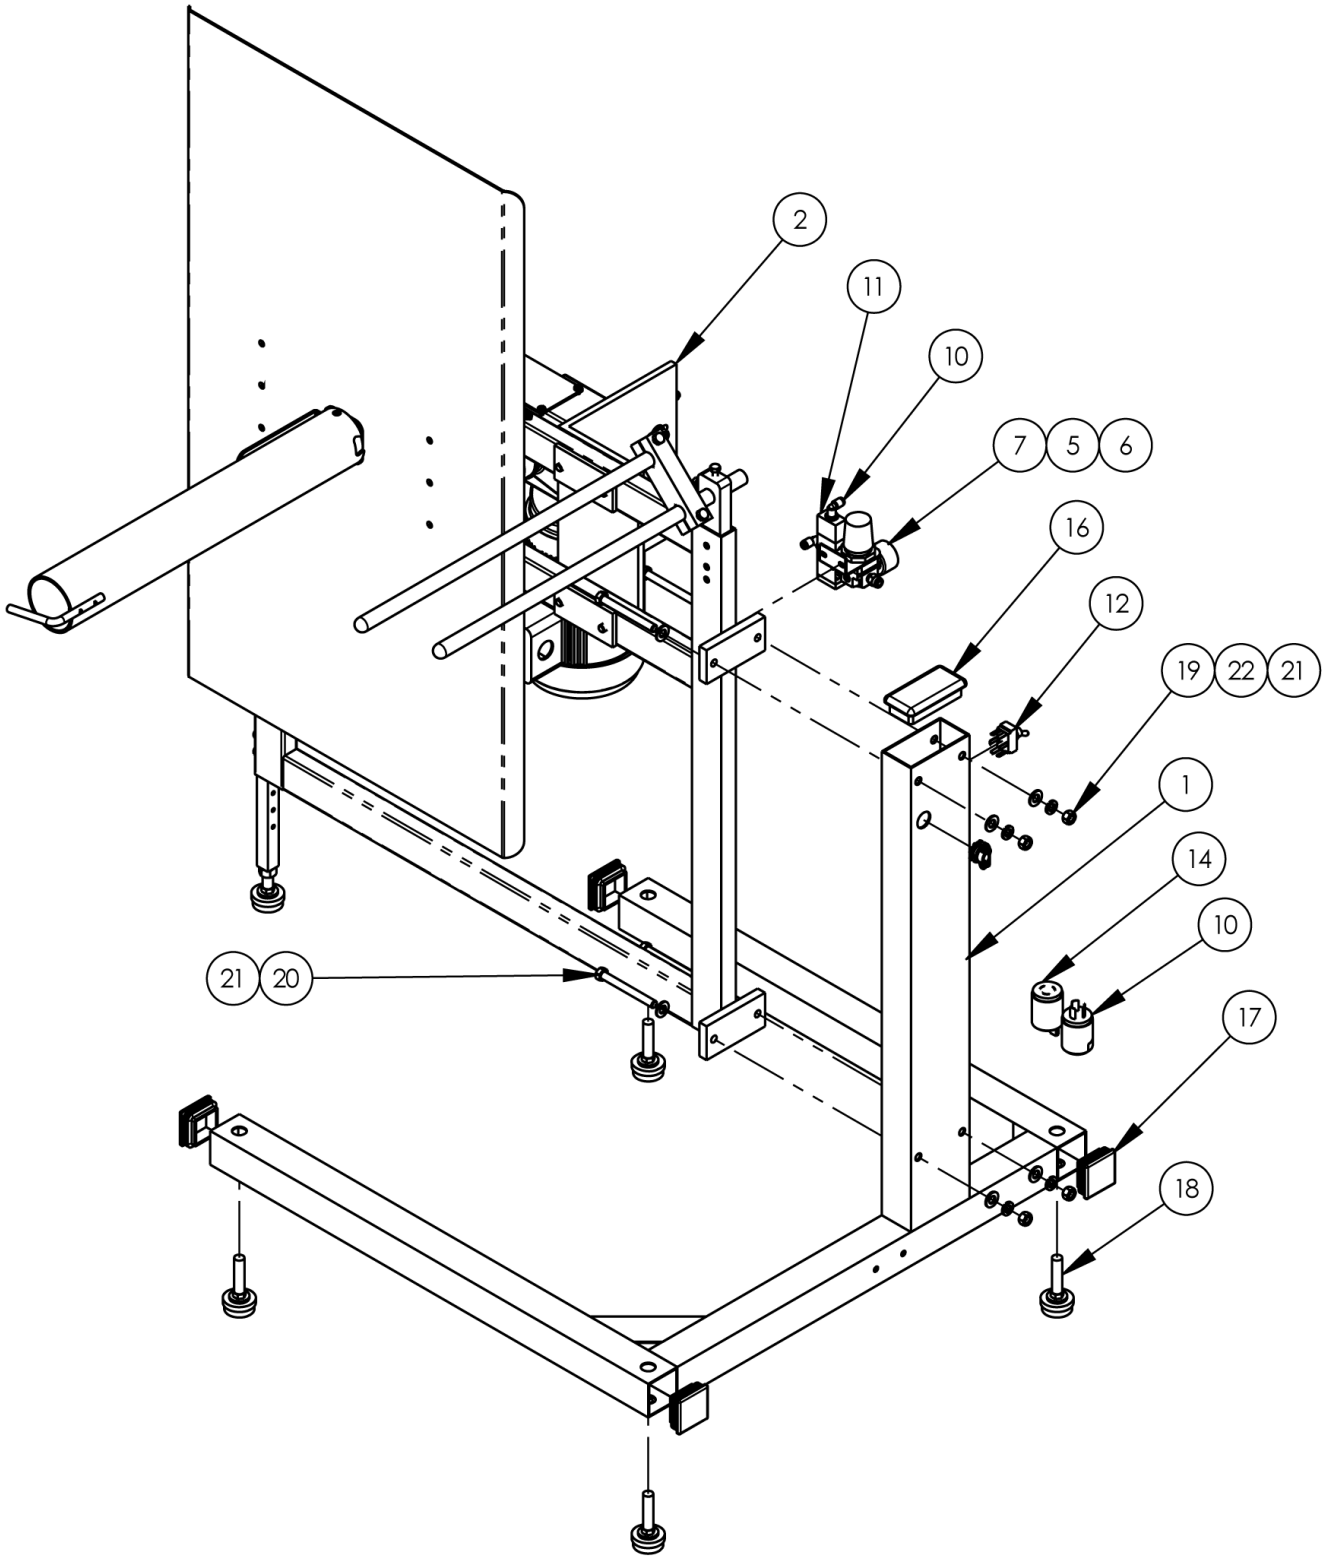

From the library of: Diamond Needle Corp

# 1330200 Rewinder W/Mounting Assembly


AAC Drawing Number 1330200 Rev 4

NO.	QTY	PART #	DESCRIPTION
1	1	1330201	REWINDER MOUNTING
2	1	1347098	REWIND ASSY W/SLEEVE
3	AR	1347MA-PD	PNEUMATIC DIAGRAM
4	AR	1347MA-WD	WIRING DIAGRAM
5	1	4130-001	REGULATOR BRACKET
6	1	AA198-502	REGULATOR,AIR,0-30 PSI
7	1	AA198-5032	GAUGE,PRESSURE,0-60 PSI
8	1	AAF122A-A	1/8" NPT HEX CLOSE
9	1	AAQMC-4-8	QUICK MALE CONN,1/4X1/8
10	2	AAQME-5-4	ELBOW, MALE 5/32X1/4NPT
11	1	AAV125B	PILOT VALVE
12	1	FF23F356	DPDT SWITCH,ON-OFF-ON
10	1	FFHBL4570C	PLUG, 2P/3W, GROUNDING
14	1	FFHBL4579C	RECEPTACLE,3 POLE,3W
15	2	K-235	CONNECTOR,ROMEX,1/2"
16	1	MM132-2X4	END CAP,RECT,BLACK
17	4	MM9565K56	PLUG,BLACK, 2" SQ
18	4	MMFB4444	FOOT, RUBBER
19	4	NNH3/8-16	3/8-16 HEX NUT
20	4	SSHC25224	3/8-16 X 3-1/2 HEX HEAD
21	8	WWFS3/8	WASHER, FLAT, 3/8
22	4	WWL3/8	3/8 LW

Page 33

Page 35

Page 37

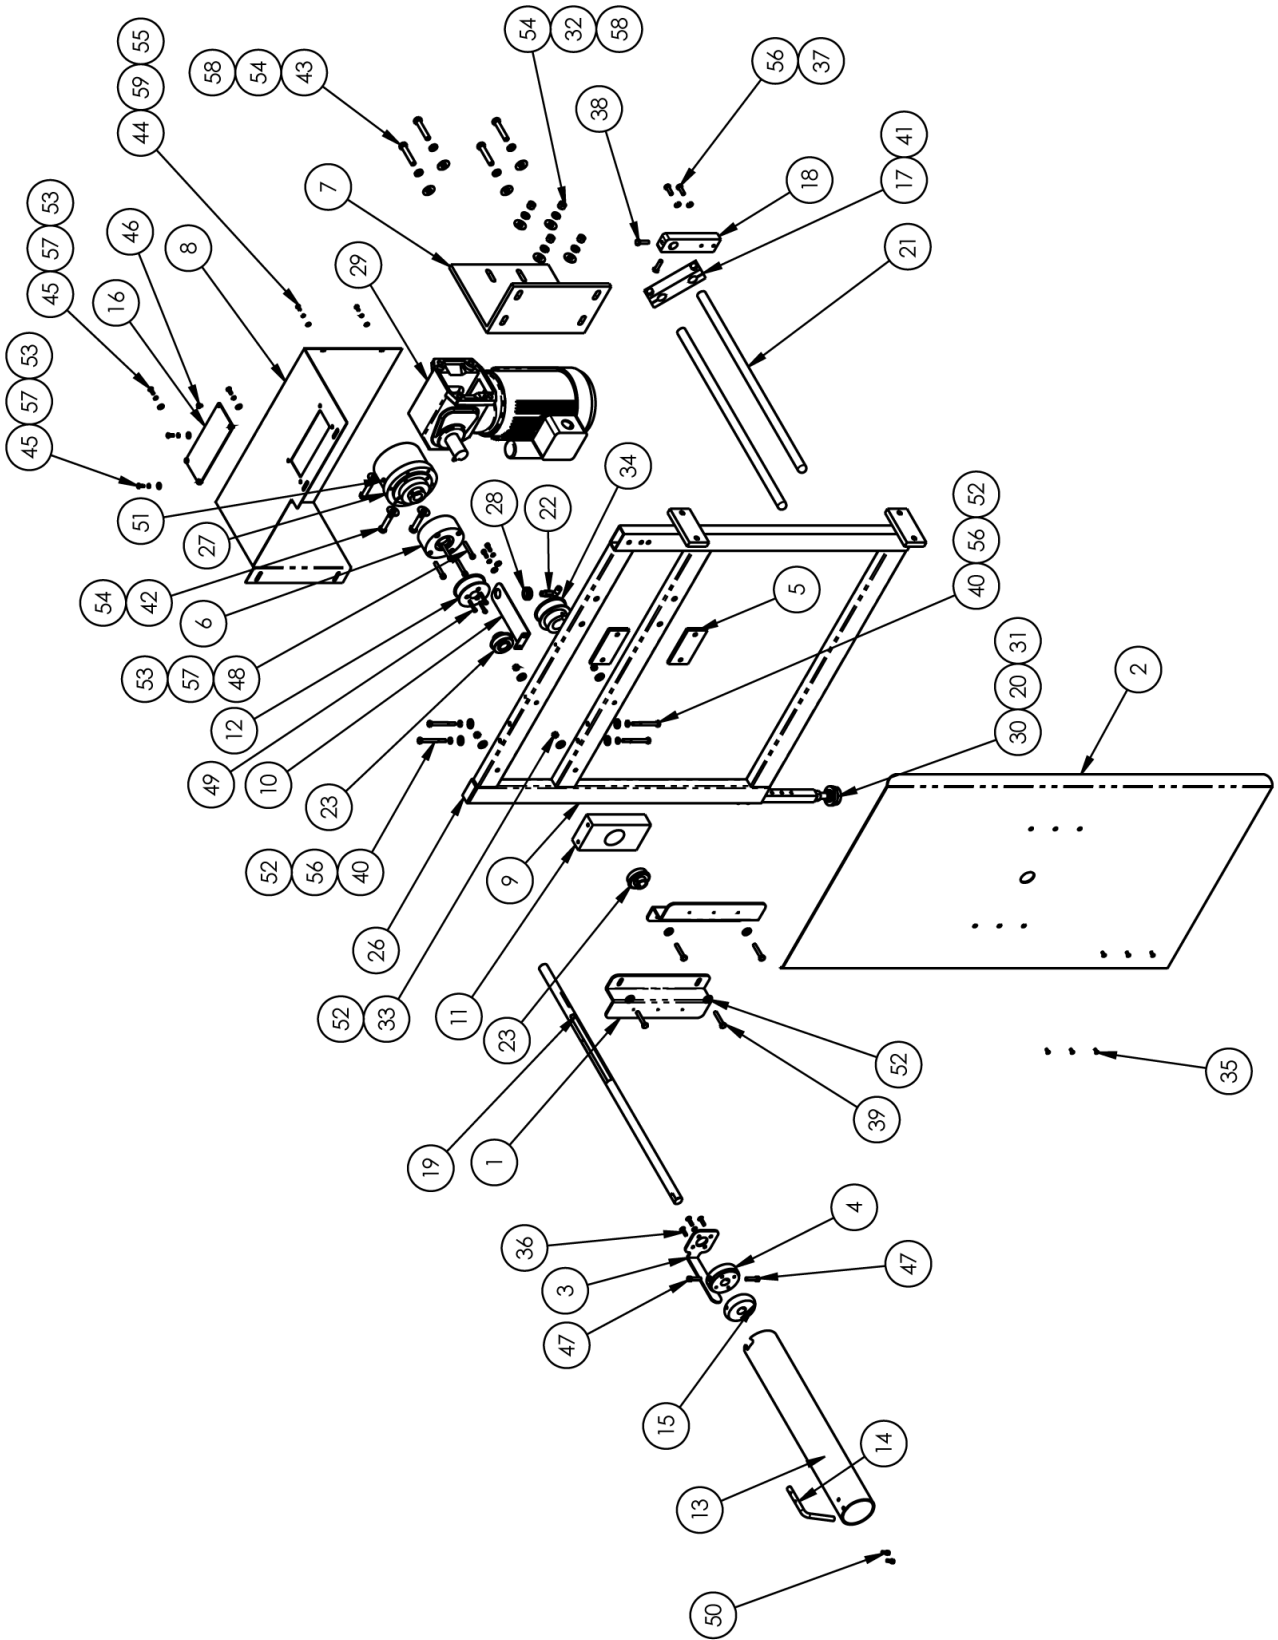


# 1347098 Rewind Assembly w/Sleeve

AAC Drawing Number 1347098 Rev 1

NO.	QTY	PART #	DESCRIPTION	NO.	QTY	PART #	DESCRIPTION
1	2	1334326	MOUNT, FLANGE	31	1	NNH1/2-13	NUT,HEX,1/2-13
2	1	1334376	PLATE, REWIND,24 X 40	32	4	NNH3/8-16	NUT,HEX,3/8-16
3	1	1334387	CATCH, MATL. TAKEUP REEL	33	4	NNK1/4-20	KEP NUT, 1/4-20
4	1	1334388	HUB, TAKEUP SPINDLE	34	1	PP22LB075-1-1/8	PULLEY, GEAR, 3/8P, 22T
5	2	1961-319	PLATE,NUT,3/8-16@3.00 CTC	35	6	SSFC80024	6-32 X 3/8 FLAT CAP
6	1	1961-321	PLATE, ADAPTOR, AIR CLUTC	36	4	SSFC98048	#10-32 X .75 SHCSF
7	1	1961-331	MOUNT, MOTOR	37	4	SSHC01048	1/4-20 X 3/4 HEX CAP
8	1	1961-332	COVER, MOTOR	38	2	SSHC01064	1/4-20 X 1 HHCS
9	1	1961-335	FRAME, PREFEED & REWIND A	39	4	SSHC01096	1/4-20 X 1-1/2 HHCS
10	1	1961-354B	SUPPORT, AIR CLUTCH	40	4	SSHC01160	1/4-20 X 2-1/2 HHCS
11	1	1961-365B	BLOCK, BEARING MOUNT	41	2	SSHC10096	5/16-18 X 1-1/2 HHCS
12	1	1961-366A	PULLEY,CLUTCH,22 TH,3/8 P	42	4	SSHC25096	3/8-16 X 1 1/2 HEX HEAD
13	1	1961-372	SLEEVE, REWIND, 18" CAP	43	4	SSHC25128	3/8-16 X 2 HEX CAP
14	1	1961-374A	HANDLE, SLEEVE	44	4	SSPP98032	10-32 X 1/2 PAN PHIL
15	1	1961-379	SUPPORT,REWIND SLEEVE	45	4	SSPS95016	#10-24 X 1/4 PAN HD SLTD
16	1	1961104	COVER, INSPECTION	46	2	SSSC01064	1/4-20 X 1 SOC CAP
17	1	1962-3201	CLAMP, 3/4 ROD, 3" CTC	47	4	SSSC01096	1/4-20 X 1-1/2 SOC CAP
18	1	1962-3202A	SUPPORT, TENSION PULLER	48	3	SSSC90064	#8-32 X 1 SOC CAP SC
19	1	1962-375	SHAFT, AIR CLUTCH, MM8028	49	4	SSSC98032	10-32X1/2, SOC CAP
20	1	26127	LEG FOR AP-26-02	50	2	SSSS01016	1/4-20 X 1/4 KNURL PT
21	2	33008202	ROD,ROLL,SST,3/4X21 W/RAD	51	14	WWF1/4	WASHER, FLAT, 1/4", COM
22	1	AAQMEL-5-8	QUICK MALE ELBOW, LONG	52	6	WWF10	WASHER, FLAT, #10, COM
23	2	BBS8703-88	BEARING,BALL,.75IDX1.75OD	53	2	WWF8	WASHER, FLAT, #8
24	1	GG225L075	GEAR BELT	54	8	WWL1/4	WASHER,LOCK,1/4
25	1	K-235A	ROMEX CONNECTOR	55	6	WWL10	WASHER,LOCK,#10,S/S
26	1	MM132-1496	PLUG 1 X 2	56	8	WWL3/8	WASHER, LOCK, 3/8
27	1	MM802860	CLUTCH,AIR,3/4 BORE,4.5"D	57	2	WWL8	WASHER,LOCK,#8
28	1	MM9600K21	GROMMET,RUBBER,9/16 ID	58	2	SSPP90024	8-32X3/8 PAN PHLPS
29	1	MMBH2LM22R	MOTOR,GEAR,R/A,220V	59	12	WWF3/8	WASHER,FLAT,3/8 OR 10MM
30	1	MMFB4444	FOOT, RUBBER				

From the library of: Diamond Needle Corp


# 1330-PD Pneumatic Diagram

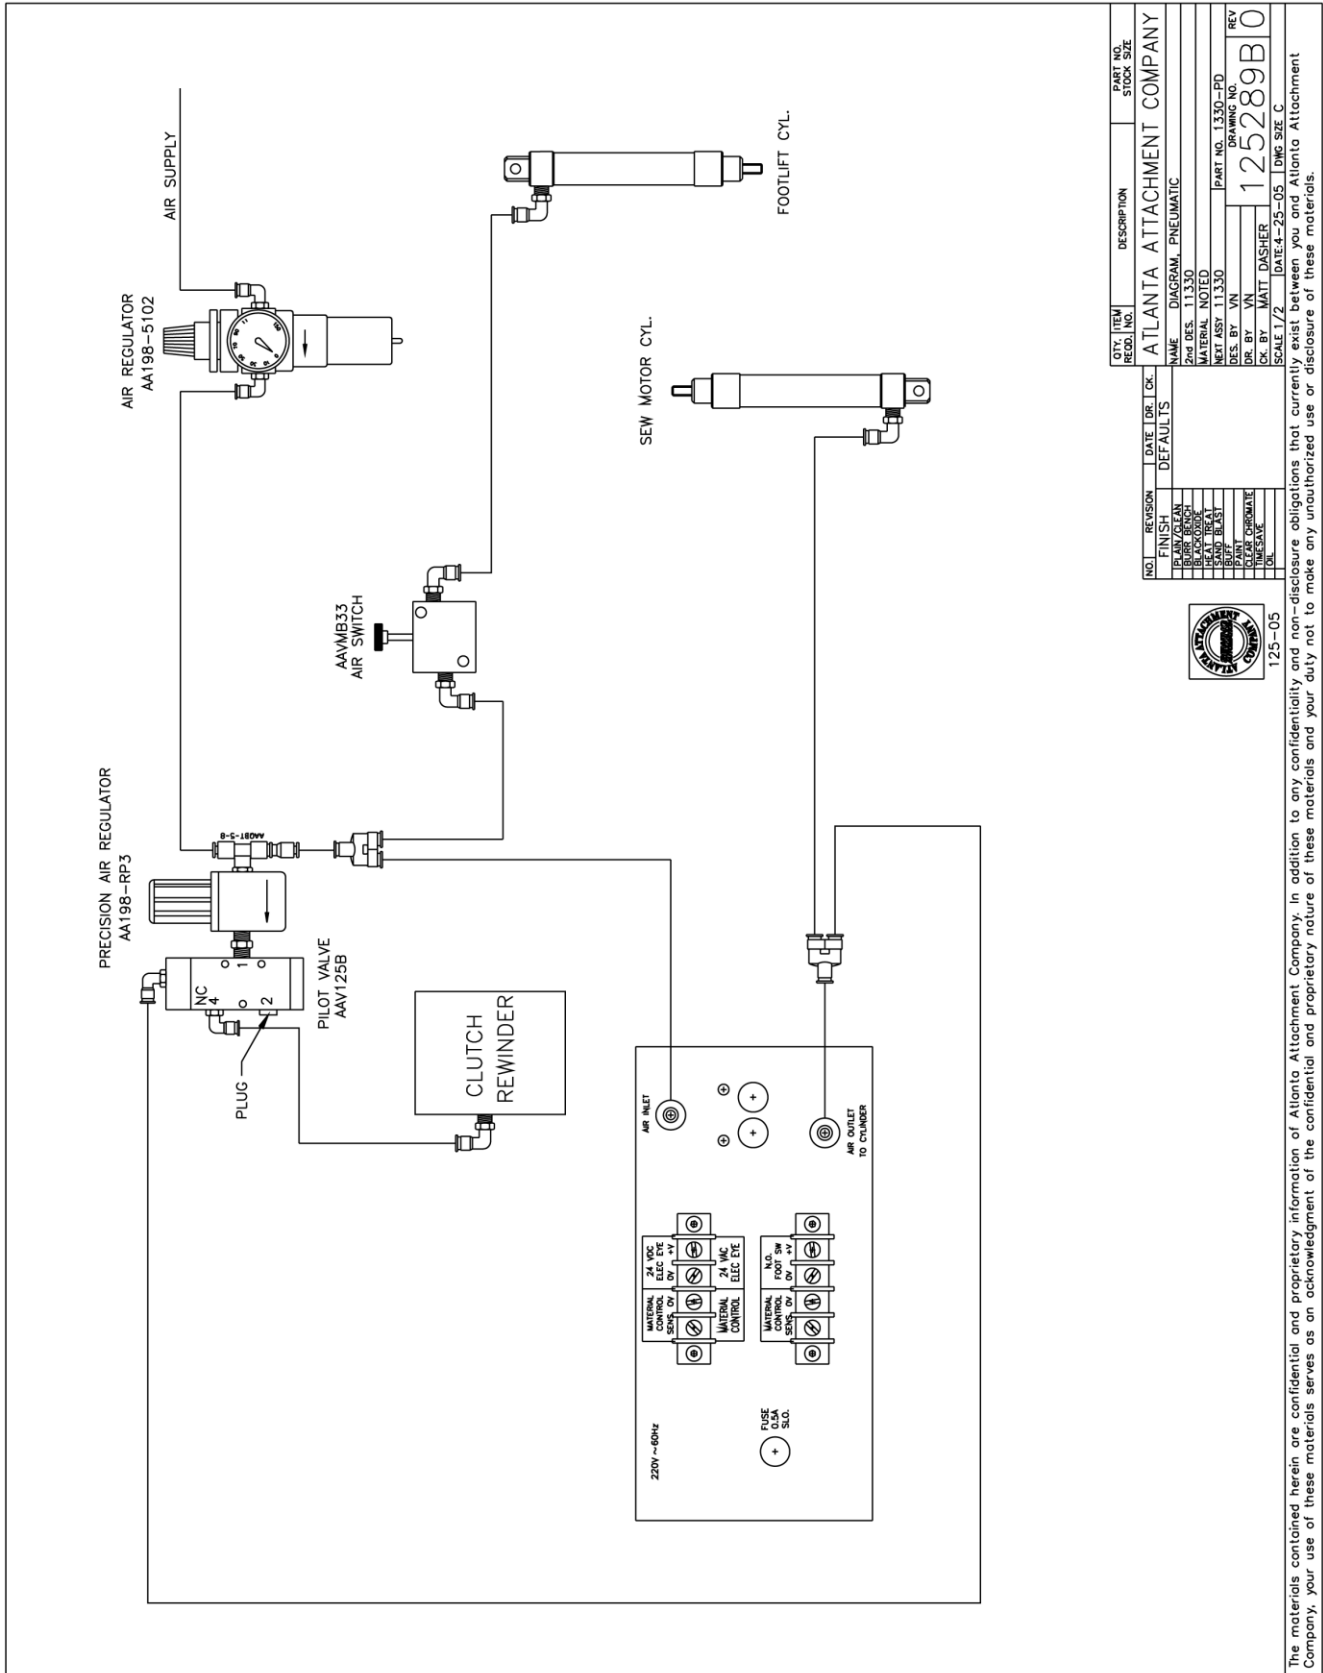

QTY.	ITEM	DESCRIPTION	PART NO.	STOCK SIZE
		<b>ATLANTA ATTACHMENT COMPANY</b>		
		NAME: DIAGRAM, PNEUMATIC		
		2nd DES. 11.3.30		
		MATERIAL NOTED		
		NEXT ASSY 1330		
		DES. BY VN		
		DR. BY MATT DASHER		
		SCALE 1/2 DATE 4-25-05 DWG SIZE C		
		PART NO. 1330-PD		
		REV. 0		
		125289B		


The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.

# 1347MA-PD Pneumatic Diagram, 1347MA

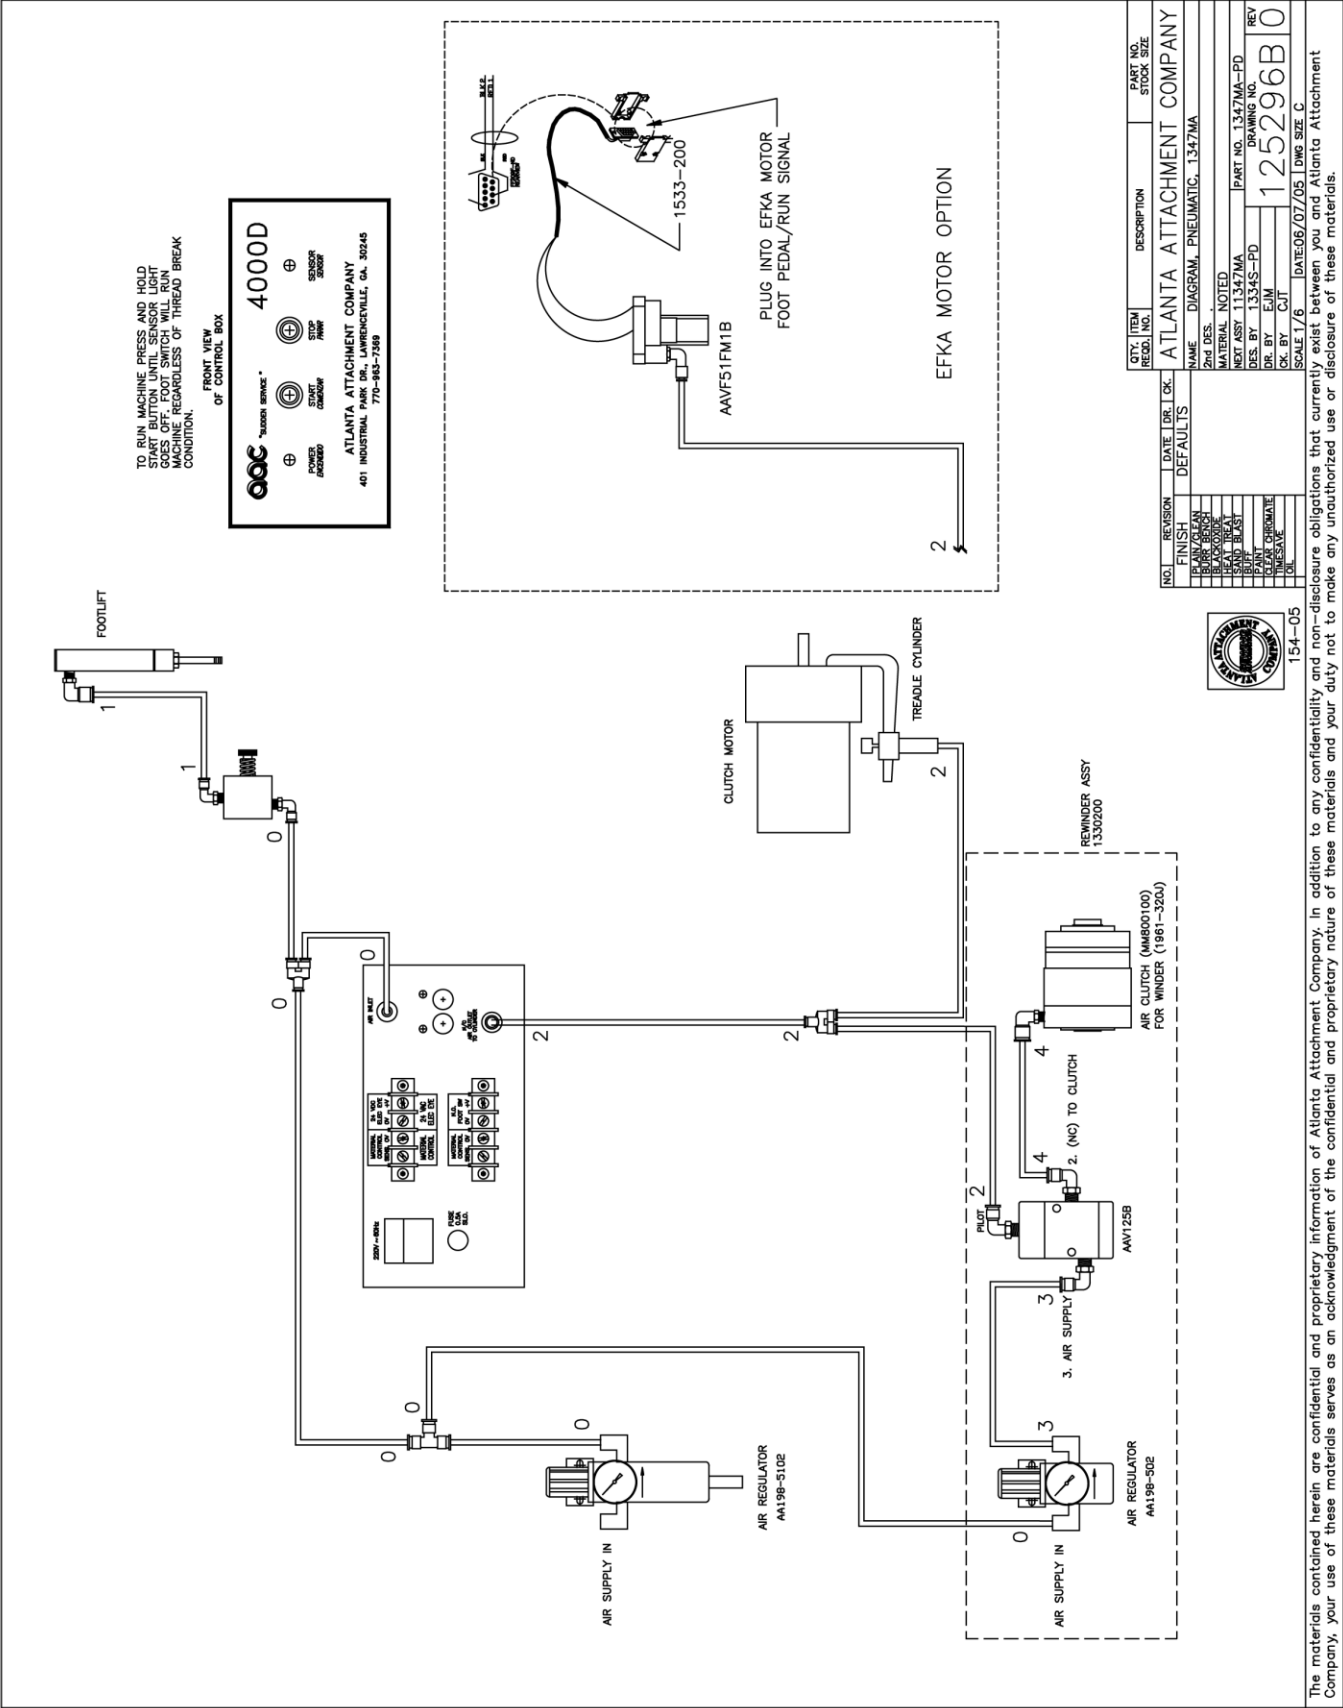

TO RUN MACHINE PRESS AND HOLD  
OFF FOOT SWITCH UNTIL LIGHT  
GOES OFF. FOOT SWITCH WILL RUN  
MACHINE REGARDLESS OF THREAD BREAK  
CONDITION.

**4000D**  
SOLENOID VALVE  
ATLANTA ATTACHMENT COMPANY  
401 INDUSTRIAL PARK DR., LAWRENCEVILLE, GA. 30245  
770-962-7588

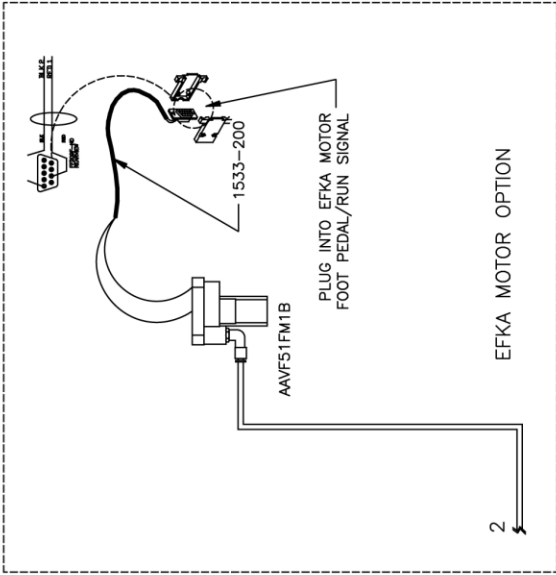


QTY.	ITEM	DESCRIPTION	PART NO.	STOCK SIZE
	REORD. NO.			
ATLANTA ATTACHMENT COMPANY				
NAME DIAGRAM, PNEUMATIC, 1347MA				
MATERIAL NOTED				
NEXT ASSY 1347MA				
DES. BY 1334S-PD				
DR. BY EJM				
CHK. BY CJM				
SCALE 1/6 DATE 06/07/05 DWG SIZE C				
REV 125296B				



154-05

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of the materials and your duty not to make any unauthorized use or disclosure of these materials.


# 1330-WD Wiring Diagram

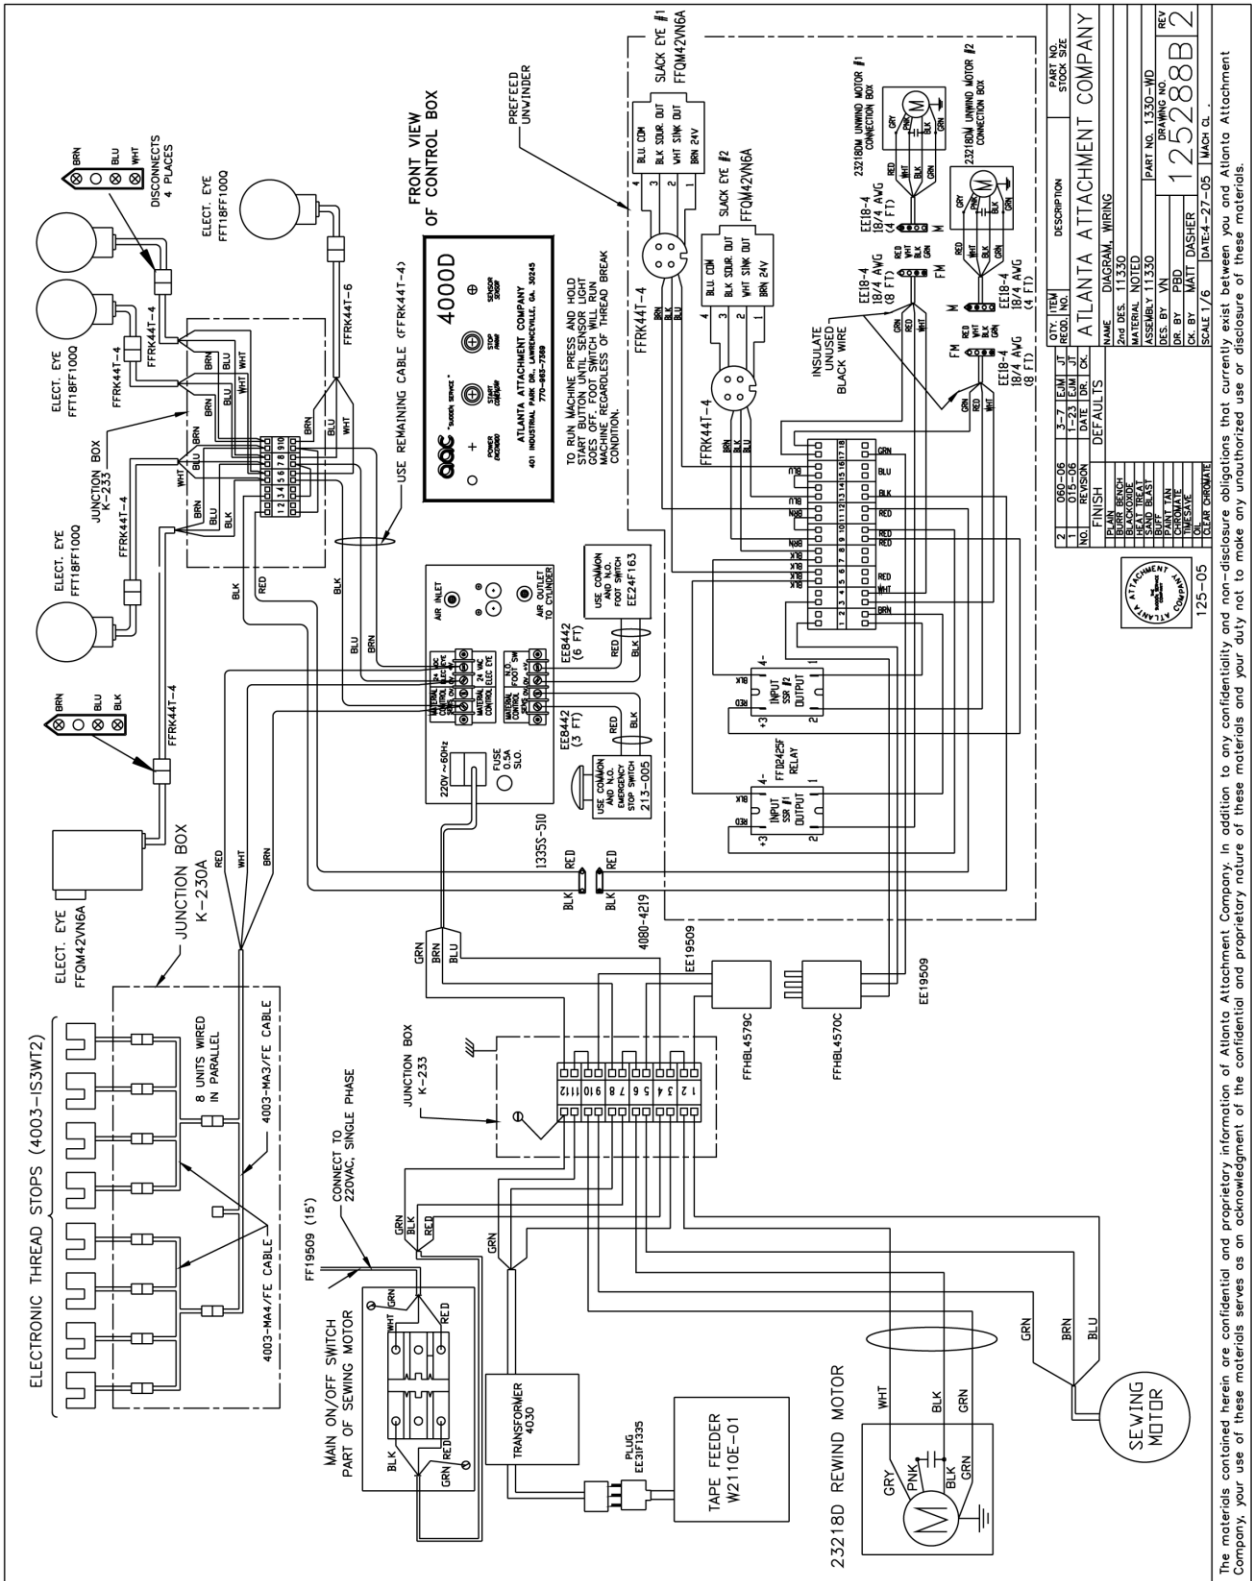

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.



# 1347MA-WD Wiring Diagram

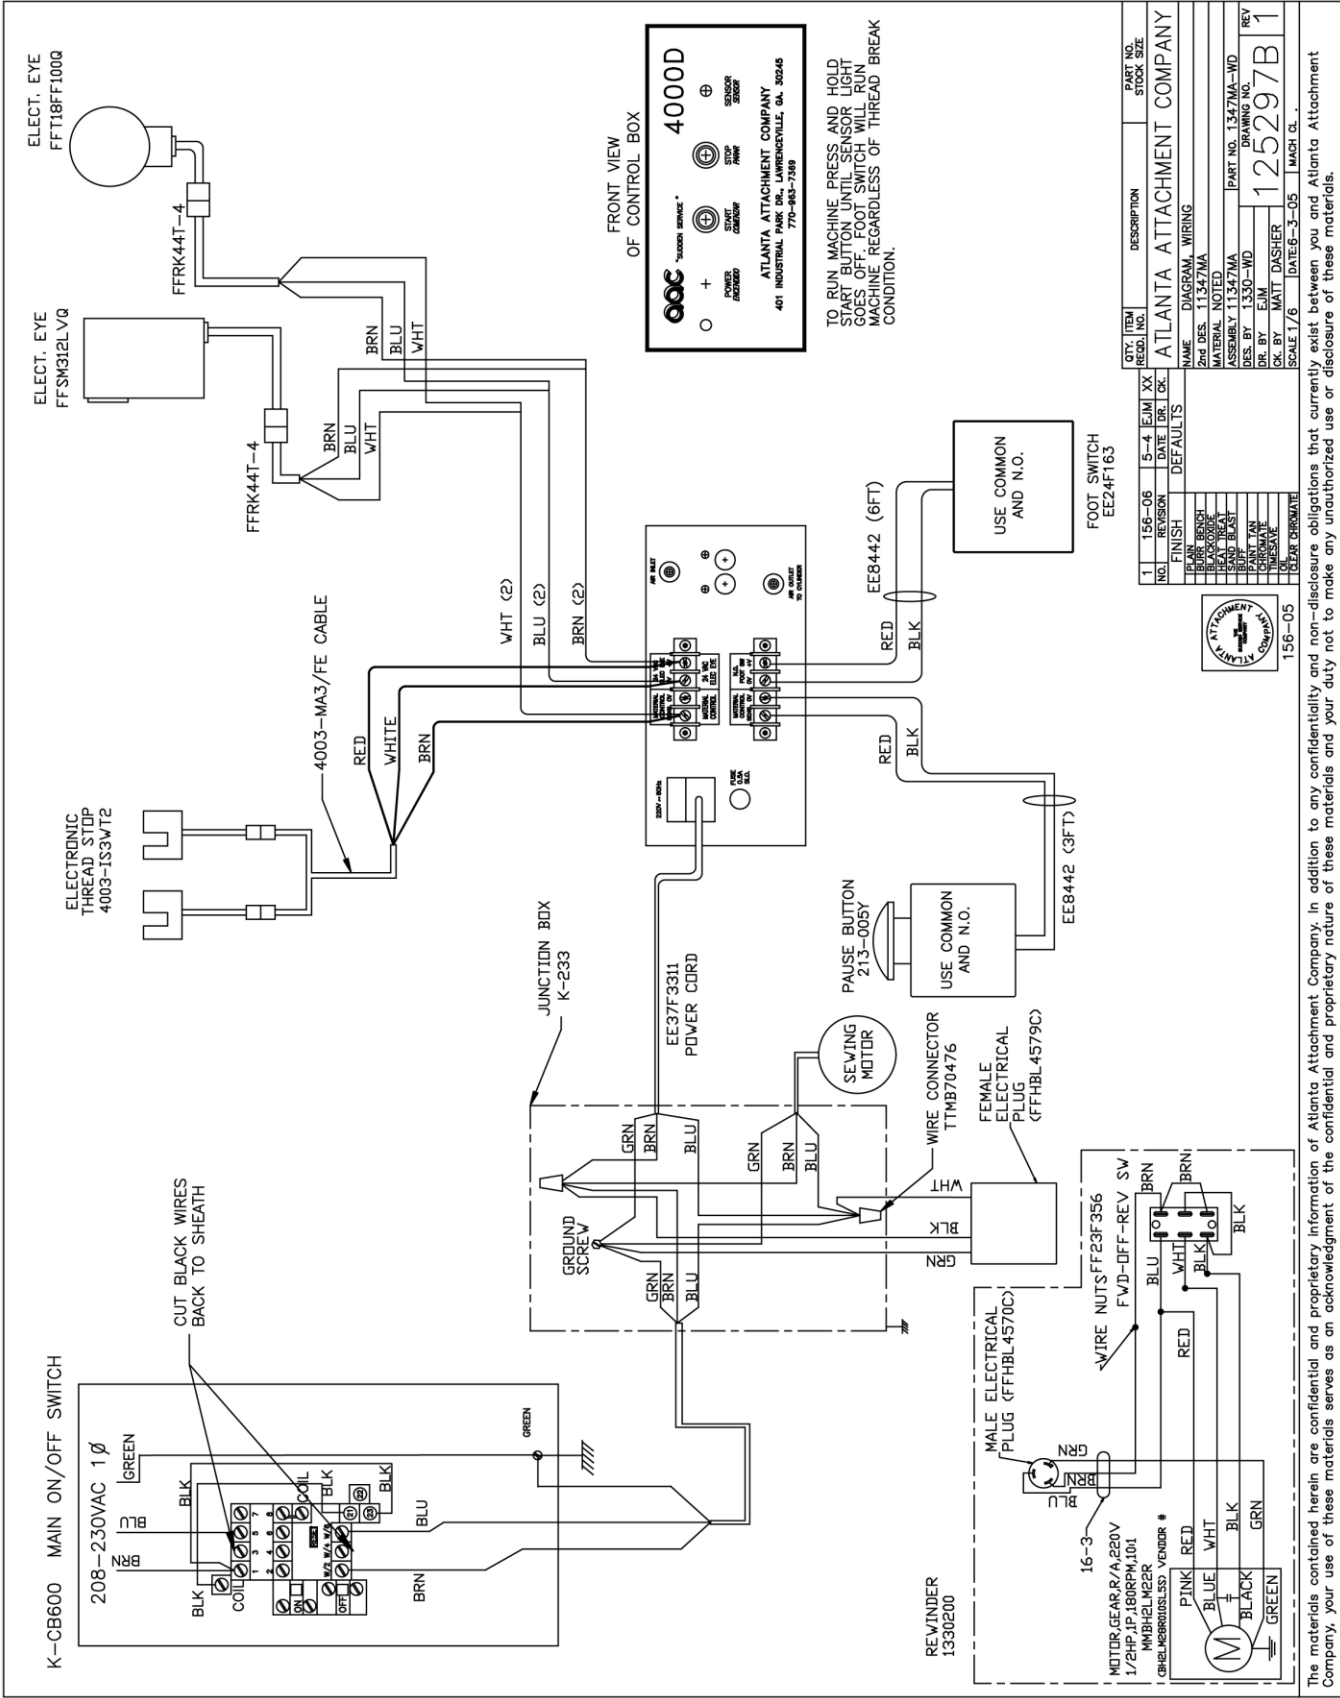

---

# Atlanta Attachment Company (AAC) Statement of Warranty

## Manufactured Products

Atlanta Attachment Company warrants manufactured products to be free from defects in material and workmanship for a period of eight hundred (800) hours of operation or one hundred (100) days whichever comes first. Atlanta Attachment Company warrants all electrical components of the Serial Bus System to be free from defects in material or workmanship for a period of thirty six (36) months.

## Terms and Conditions:

- AAC Limited Warranty becomes effective on the date of shipment.
- AAC Warranty claims may be made by telephone, letter, fax or e-mail. All verbal claims must be confirmed in writing.
- AAC reserves the right to require the return of all claimed defective parts with a completed warranty claim form.
- AAC will, at its option, repair or replace the defective machine and parts upon return to AAC.
- AAC reserves the right to make the final decision on all warranty coverage questions.
- AAC warranty periods as stated are for eight hundred (800) hours or one hundred (100) days whichever comes first.
- AAC guarantees satisfactory operation of the machines on the basis of generally accepted industry standards, contingent upon proper application, installation and maintenance.
- AAC Limited Warranty may not be changed or modified and is not subject to any other warranty expressed or implied by any other agent, dealer, or distributor unless approved in writing by AAC in advance of any claim being filed.

## What Is Covered

- Electrical components that are not included within the Serial Bus System that fail due to defects in material or workmanship, which are manufactured by AAC are covered for a period of eight hundred (800) hours.
- Mechanical parts or components that fail due to defects in material or workmanship, which are manufactured by AAC.
- Purchased items (sewing heads, motors, etc.) will be covered by the manufacturers (OEM) warranty.
- AAC will assist in the procurement and handling of the manufacturers (OEM) claim.

## What Is Not Covered

- Parts that fail due to improper usage, lack of proper maintenance, lubrication and/or modification.
- Damages caused by; improper freight handling, accidents, fire and issues resulting from unauthorized service and/or personnel, improper electrical, plumbing connections.
- Normal wear of machine and parts such as Conveyor belts, "O" rings, gauge parts, cutters, needles, etc.
- Machine adjustments related to sewing applications and/or general machine operation.
- Charges for field service.
- Loss of time, potential revenue, and/or profits.
- Personal injury and/or property damage resulting from the operation of this equipment.

# Declaración de Garantía

## Productos Manufacturados

Atlanta Attachment Company garantiza que los productos de fabricación son libres de defectos de material y de mano de obra durante un periodo de ochocientos (800) horas de operación o cien (100) días cual llegue primero. Atlanta Attachment Company garantiza que todos los componentes del Serial bus son libres de defectos de material y de mano de obra durante un periodo de treinta y seis (36) meses.

## Términos y Condiciones:

- La Garantía Limitada de AAC entra en efecto el día de transporte.
- Reclamos de la Garantía de AAC pueden ser realizados por teléfono, carta, fax o correo electrónico. Todo reclamo verbal tiene que ser confirmado vía escrito.
- AAC reserva el derecho para exigir el retorno de cada pieza defectuosa con un formulario de reclamo de garantía.
- AAC va, según su criterio, reparar o reemplazar las máquinas o piezas defectuosas devueltas para AAC.
- AAC reserva el derecho para tomar la decisión final sobre toda cuestión de garantía.
- Las garantías de AAC tiene una validez de ochocientas (800) horas o cien (100) días cual llega primero.
- AAC garantiza la operación satisfactoria de sus máquinas en base de las normas aceptadas de la industria siempre y cuando se instale use y mantenga de forma apropiada.
- La garantía de AAC no puede ser cambiado o modificado y no está sujeto a cualquier otra garantía implicado por otro agente o distribuidor menos al menos que sea autorizado por AAC antes de cualquier reclamo.

## Lo Que Está Garantizado

- Componentes eléctricos que no están incluidos dentro del sistema Serial Bus que fallen por defectos de materiales o de fabricación que han sido manufacturados por AAC son garantizados por un periodo de ochocientas (800) horas.
- Componentes mecánicos que fallen por defectos de materiales o de fabricación que han sido manufacturados por AAC son garantizados por un periodo de ochocientas (800) horas.
- Componentes comprados (Motores, Cabezales, ) son protegidos debajo de la garantía del fabricante.
- AAC asistirá con el manejo de todo reclamo de garantía bajo la garantía del fabricante.

## Lo Que No Está Garantizado

- Falla de repuestos al raíz de uso incorrecto, falta de mantenimiento, lubricación o modificación.
- Daños ocurridos a raíz de mal transporte, accidentes, incendios o cualquier daño como resultado de servicio por personas no autorizados o instalaciones incorrectas de conexiones eléctricas o neumáticas.
- Desgaste normal de piezas como correas, anillos de goma, cuchillas, agujas, etc.
- Ajustes de la máquina en relación a las aplicaciones de costura y/o la operación en general de la máquina.
- Gastos de Reparaciones fuera de las instalaciones de AAC
- Pérdida de tiempo, ingresos potenciales, y/o ganancias.
- Daños personales y/o daños a la propiedad como resultado de la operación de este equipo.



**Atlanta Attachment Company**  
362 Industrial Park Drive  
Lawrenceville, GA 30046  
770-963-7369  
[www.atlatt.com](http://www.atlatt.com)

**Printed in the USA**

From the library of: Diamond Needle Corp